


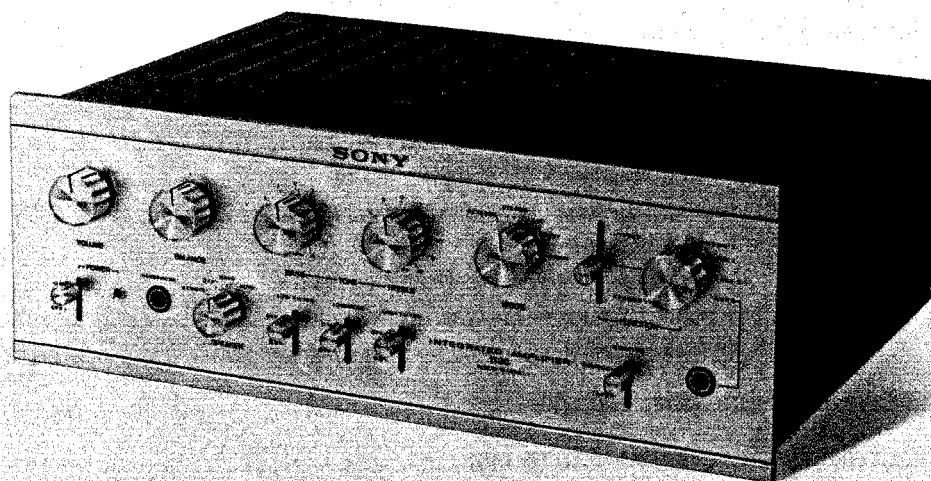

Set using ISO screws

TA-1130

General Export Model
GEP Model
NEP Model



SONY®
SERVICE MANUAL

TABLE OF CONTENTS

	<u>Title</u>	<u>Page</u>
SECTION 1.	TECHNICAL DESCRIPTION	
1-1.	Technical Specification	1
1-2.	Detailed Circuit Analysis	2~7
1-3.	Level Diagram	7
1-4.	Block Diagram	8
SECTION 2.	DISASSEMBLY AND REPLACEMENT PROCEDURES	
2-1.	Tools Required	9
2-2.	Hardware Identification Guide	9
2-3.	Top Cover and Front Panel Removal	9
2-4.	Front Subchassis Removal	10
2-5.	Control and Switch Replacement	11
2-6.	Rear Panel Removal	11
2-7.	Power Transistor Replacement	12
2-8.	Replacement of Components Secured to the Rear Panel by Rivets	12
2-9.	Chassis Layout	13
SECTION 3.	ADJUSTMENTS	
3-1.	Power Supply Voltage Adjustment for Preamplifier Section	14
3-2.	Power Amplifier Adjustments	14~15
SECTION 4.	REPACKING	16
SECTION 5.	DIAGRAMS	
5-1.	Mounting Diagram – Muting Board –	17
5-2.	Mounting Diagram – Preamplifier Board –	18~19
5-3.	Mounting Diagram – Power Amplifier Board –	20~21
5-4.	Mounting Diagram – Power Supply/Speaker Protection Board –	22~23
5-5.	Schematic Diagram – Preamplifier Section –	25~26
5-6.	Schematic Diagram – Power Amplifier Section –	27~28
SECTION 6.	EXPLODED VIEWS	29~31
SECTION 7.	ELECTRICAL PARTS LIST	32~35

SECTION 1

TECHNICAL DESCRIPTION

1-1. TECHNICAL SPECIFICATIONS

Technical specifications for the TA-1130 are given in Table 1-1.

TABLE 1-1. SPECIFICATIONS

Power Amplifier Section		Signal output and impedance:	TAPE : 130 mV, 100 k REC/PB : 130 mV, 100 k AUX 1,2,3 : 130 mV, 100 k REC OUT : 150 mV, 10 k REC/PB out : 30 mV, 82 k PRE OUT : 1 V, 5 k
Dynamic power output:	230 watts (4 ohms), both channels operating	Signal-to-noise ratio:	PHONO 1, 2 : greater than 70 dB (weighting network A)
(IHF constant power supply method)	200 watts (8 ohms), both channels operating		TAPE: } greater than 90 dB (weighting network A) REC/PB: } AUX 1,2,3: }
Continuous RMS power:	70 watts (4 ohms) per channel, both channels operating 65 watts (8 ohms) per channel, both channel operating	Tone controls:	BASS : ± 10 dB at 100 Hz (10 steps by 2 dB each) TREBLE : ± 10 dB at 10 kHz (10 steps by 2 dB each)
20 Hz to 20 kHz power output:	50 watts (8 ohms) both channels operating	Filters:	HIGH : 6 dB/oct, above 7 kHz LOW : 6 dB/oct, below 100 Hz
Power bandwidth:	7 Hz to 30 kHz, IHF	Loudness control:	+8 dB at 50 Hz, +3 dB at 10 kHz (with 30 dB attenuation)
Harmonic distortion: (20 Hz ~ 20 kHz)	Less than 0.1% at 1 kHz at rated output Less than 0.05% at 1 watt output	Harmonic distortion:	Less than 0.1% at 1 kHz at rated output
IM distortion: (60 Hz: 7 kHz = 4 : 1)	Less than 0.1% at rated output Less than 0.05% at 1 watt output	IM distortion: (60 Hz : 7 kHz = 4 : 1)	Less than 0.1% at rated output
Frequency response:	10 Hz to 200 kHz (± 2 dB) at 1 watt output		
Signal-to-noise ratio:	Greater than 110 dB (shorted input, weighting network A)		
Residual noise:	Less than 0.008 μ W		
Input sensitivity and impedance:	1V for rated output, 90 k ohms (POWER AMP INPUT)		
Preamplifier Section		General	
Frequency response:	PHONO 1, 2 : RIAA curve ± 0.5 dB TAPE : 10Hz to 100kHz REC/PB : 10Hz to 100kHz AUX1,2,3 : 10Hz to 100kHz TUNER : 10Hz to 100kHz	Power consumption:	Approx. 280 watts (GEP and General Export Model) Approx. 210 watts (NEP Model)
Input sensitivity and impedance:	PHONO 1, 2 : 1.2 mV, 47 k TUNER : 130 mV, 100 k	Power requirement:	100, 117, 220 or 240 volts, 50/60 Hz ac
		Dimensions:	400 mm (width) \times 149 mm (height) \times 327 mm (depth) 15 $\frac{3}{4}$ " (width) \times 5 $\frac{7}{8}$ " (height) \times 12 $\frac{7}{8}$ " (depth)
		Net weight:	13 kg (28 lb 11 oz)
		Shipping weight:	14.9 kg (32 lb 14 oz)

1-2. DETAILED CIRCUIT ANALYSIS

The following describes the function or operation of all stages and controls. The text sequence follows signal paths. Stages are listed by transistor reference designation at the left margin; major components are also listed in a similar manner. Refer to the block diagram on page 8 and the schematic diagram on pages 25 to 28.

Stage/Control	Function
Preamplifier Section	
Equalizer amplifier Q101, Q102	<p>This direct-coupled two-stage amplifier (FET-NPN) amplifies the small signal provided by the phono cartridge to the level required at the input of the following tone-control amplifier. An FET has an high input impedance and generates less noise than conventional silicon transistors.</p> <p>Therefore, FETs are employed in the preamplifier stages.</p> <p>The FETs used in the preamplifier stages are selected according to their Idss rank, and care should be taken to use replacement FETs with the exact same Idss rank.</p> <p>Idss rank is indicated by the identification number, as illustrated in Fig. 1-1.</p>

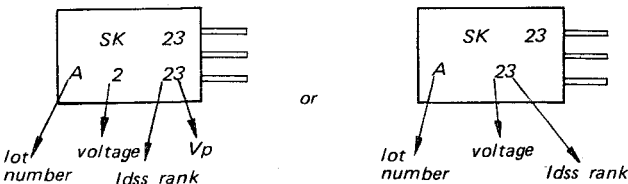


Fig. 1-1 Example of Idss rank

Stage/Control	Function
Bias circuit R110, R109 R102	Dc bias voltage for Q101 is extracted from R110 in the emitter circuit of Q102 and fed back to the gate of Q101 through R109 and R102. This dc negative feedback technique provides stable operation.
Equalization circuit R111, R112, R113, R104 C107, C108, C109	<p>RIAA equalization is achieved by the negative-feedback loop containing R111, R112, R113, R104, C107, C108 and C109.</p> <p>Be sure to use replacement components with the exact same values.</p> <p>R115 (215) in the output circuit prevents interaction between left and right channel equalization when the MODE switch is set to L+R.</p>
MONITOR switch S3	Selects the signals from TAPE, AUX or equalizer outputs.
MODE switch S4	Selects the desired mode of operation. This switch may also be used for test purposes. The relation between the positions of the MODE switch and outputs of the set are summarized in the table below.
VOLUME control RV302	The equalized phono signals and signals applied to the other input terminals are fed to the VOLUME control through the MONITOR and MODE switches. The level of the signal applied to the following tone-control amplifier is determined by the setting of RV302.

TABLE 1-2.

MODE SELECTOR SWITCH POSITION	SPEAKER OUT; LEFT	SPEAKER OUT; RIGHT	HEAD-PHONE OUT; LEFT	HEAD-PHONE OUT; RIGHT	REC OUT; LEFT	REC OUT; RIGHT	PRE-AMP OUT; LEFT	PRE-AMP OUT; RIGHT
REVERSE	R	L	R	L	L	R	R	L
STEREO	L	R	L	R	L	R	L	R
L + R	L + R	L + R	L + R	L + R	L + R	L + R	L + R	L + R
LEFT	L	L	L	L	L	L	L	R
RIGHT	R	R	R	R	R	R	L	R

<i>Stage/Control</i>	<i>Function</i>	<i>Stage/Control</i>	<i>Function</i>
LOUDNESS switch S5	This switch and R301, R302, C301 and C302 compensate for the characteristics of the human ear which vary according to the loudness of the sound being heard. When this switch is set to ON, and the VOLUME control is set for 30 dB attenuation, the overall frequency response is increased 8 dB at 50 Hz and 3 dB at 10 kHz with reference to the level at 1 kHz.		high-frequency components (6 dB/oct above 7 kHz) from the input signal when this switch is ON.
Tone-control amplifier Q301, Q302, Q303	This three-stage amplifier has basically flat response, but it operates as a negative-feedback type tone-control circuit. The input signals are amplified by Q301 and Q302, and then applied to Q303 (source follower). The output generated at the source circuit of Q303 is fed back to the source circuit of Q301 through the treble and bass tone-control network.	LOW FILTER switch S9	Cuts out unwanted low frequency components from the input signal (6 dB/oct below 100 Hz) in the ON position.
BASS control switch S6-1F, S6-1R	Decreases the amount of negative feedback voltage by switching the resistors connected to S6-1F in steps for increasing the low-frequency components of the signal. Conventional RC filter network techniques are applied to obtain proper response at low frequencies by switching the resistors connected to S6-1R in steps.	Muting circuit for preamplifier Q921, Q922 (Q923)	This muting circuit prevents the loud "pop" (due to initial current flow) or click noises produced by switch controls just after turning the power switch to ON. These transients might damage a delicate high-fidelity speaker system. The base of Q922 (Q923) is connected to the collector circuit of Q921 through R998 (R999), while the base of Q921 is connected to an RC network (R994, C991) with a long time constant. When you first turn ON the power switch, Q921 remains off due to the long time constant of the associated bias circuit, while Q922 (Q923) is forward biased by R996. As a result, Q922 (Q923) is ON, shorting the preamplifier's output to ground. Thus the preamplifier's output is effectively muted. As Q921 is gradually turned ON due to the slowly-increasing base current flow, Q921 conducts and cuts off Q922, removing the muting.
TREBLE control switch S7-1R, S7-1F	Decreases the amount of negative feedback voltage by switching the resistors connected to S7-1R in steps when increasing the high-frequency components. The conventional RC filter network techniques are applied to obtain proper response at high frequencies by switching the resistors connected to S7-1F in steps. This has a range of ± 10 dB at 10 kHz.	R994, C991	
HIGH FILTER switch S8	The high-cutoff filter (R344 and C314) eliminates unwanted	NORMAL/ SEPARATE switch S10	In NORMAL, the output of the preamplifier is fed to the power amplifier's input through S10. In SEPARATE, the output of the preamplifier is disconnected from the power amplifier's input terminal, allowing you to use the sections separately.
		Power Amplifier Section	
		Preamplifier Q701, Q702	Q701 and Q702 form a paraphase amplifier, but signal out-

<i>Stage/Control</i>	<i>Function</i>	<i>Stage/Control</i>	<i>Function</i>
	<p>put is extracted from the collector circuit of Q701. This circuit has a various advantages in direct coupling systems. One is high stability despite temperature variations and another is high input impedance without reducing the amplifier's gain.</p> <p>The ac output appears across load resistor R712 (R812) in the collector circuit. An emitter decoupling circuit is formed by the emitter-base resistance of Q702, C702 and R710 in the base circuit of Q702.</p> <p>An emitter circuit formed by the emitter-base resistance of Q702, C702 and R710 is essentially a frequency-selective ac bypass to reduce the amplifier's gain at very low frequencies.</p> <p>Common emitter-resistor R711 keeps the dc current flow constant in Q701 and Q702, thus increasing the dc stability.</p>		<p>followers. The ac load resistor for this stage is R714.</p> <p>Q705 is biased into conduction and operates as a small resistance providing the necessary forward bias on the two cascaded emitter-followers.</p> <p>R715 controls the base bias of Q705, determining its emitter-collector impedance and thereby controls the dc bias voltage for the following complementary circuit.</p> <p>The negative temperature coefficient of diodes D702 and (D802) provides thermal compensation for the complementary and power-transistor circuits.</p> <p>D702 is attached to the power transistor's heat sink to detect temperature increases in the power transistors.</p> <p>These transistors operate as emitter-followers to provide the current swings demanded of the output stages and also provide the necessary phase inversion. Phase inversion is performed by using PNP and NPN type transistors.</p> <p>The output transistors Q712 and Q713 are connected directly to a power supply of about ± 50 V. Q712 supplies power to the load during the positive half cycle and Q713 operates during the negative half cycle.</p> <p>As all the stages are directly coupled and designed to obtain zero potential at the output terminal, the large coupling capacitor at the output which may cause power loss or distortion at low frequencies is eliminated.</p> <p>Two kinds of protection circuits are employed in this power amplifier. One is a power-transistor protection circuit and the</p>
Dc balance adj. R702	<p>The stabilized positive and negative power supply voltages are picked off by R908 and R907, R909 and R908, and applied to R702 or R802, R702 provides a stabilized bias voltage for transistor Q701 to set the output terminal voltage at zero dc.</p>	Dc bias adj. (idling current) Q705, R715	
Thermal compensation and noise suppressor D701	<p>As all the stages are directly coupled, dc stability is required. The negative temperature coefficient of D701 provides thermal compensation for the following driver stage.</p> <p>It also acts as a noise suppressor to reduce the popping noise caused by unbalanced current flow in the following stages when the power switch is turned off.</p>	Thermal compensator for dc bias D702 (D802)	
Driver Q704	<p>Though this stage is a conventional flat amplifier, it determines the output voltage swings because the following stages are basically emitter-</p>	Complementary circuit Q710, Q711	
		Power transistors Q712, Q713	
		Protection circuit	

Stage/Control

Function

Power-transistor
protection
circuit

other is a speaker-system protection circuit.

To protect overloaded power transistors from destruction, a new protection circuit is employed.

In the event of a short circuit at the output terminals, the protection circuit holds down the current in the power transistor and also limits the input drive signals.

Fig. 1-2 shows a partial schematic diagram detailing this protection circuit. With reference to this diagram, the protection circuit operates as follows:

(Since the protection circuit is identical for positive-going half cycles and negative-going half cycles, only the positive-going half cycle operation is described here.)

Q707 limits the positive-going half cycle of the drive voltage applied to the base of Q710 when power consumption at the Q712 collector exceeds the safety margin.

Since power dissipation at the collector can be considered a function of collector voltage and

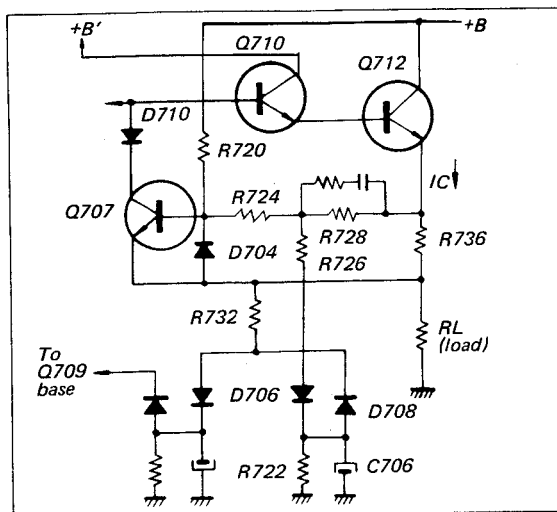


Fig. 1-2 Simplified protection circuit

Stage/Control

Function

current, the trigger signal for Q707 is taken from the collector and emitter.

Base voltage is partly determined by the ratio of resistor R720 to the series resistance consisting of R724, R728, R736 and R_L (load).

Base voltage is also determined by the current flow in R736 and the collector voltage of Q712.

During normal operation, Q707 is cut off. When excessive current flows in the power transistor or power dissipation at the collector of the power transistor exceeds the specified value, Q707 turns ON and limits the input drive voltage to the power transistor.

Limiting operation is also actuated by the condition of the load.

The base voltage of Q707 is determined by resistances R726, R722, R728, R736 and R_L (load). D706 prevents reverse voltage from being applied during the negative going half cycle.

Q707 turns ON limiting the input drive voltage to the power transistor when the load resistance decreases to some extent.

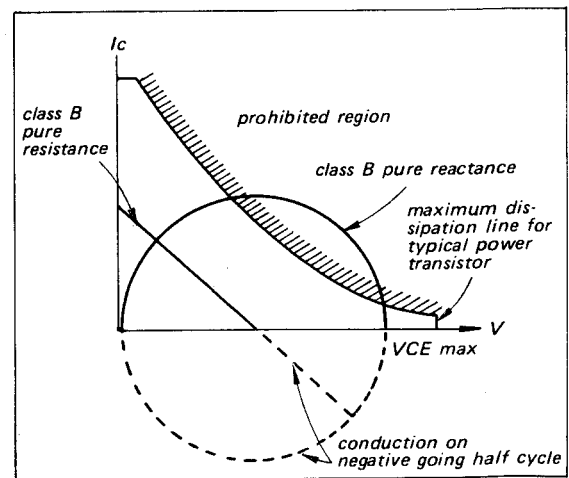


Fig. 1-3 Resistive and reactive load lines for class B output stage showing breakdown risk

— 6 —

Stage/Control

Function

Power-Supply Section

Rectifier D903

A full-wave bridge rectifier and center-tapped transformer provides positive and negative dc power supplies for the power amplifier.

Rectifier
D904, D905

A pair of half-wave rectifiers (D904 and D905) and filter capacitors (C916 and C924) supply additional dc voltage in series with the bridge-rectifier output for the complementary stages.

Ripple filter
Q903, R912,
R913, C914,
Q904, R915,
R916, C922

These components reduce the ripple voltages in the dc power supply for preamplifier and driver stages of the power amplifier section to an extremely-low value.

Q903 and Q904 serve as an electronic filter to supply well-filtered dc of about $\pm 53V$ to preamplifier stages in the power amplifier.

Stage/Control

Regulated
power supply
Q906, Q907,
Q908

Function


Dc output from rectifier D918 is filtered by C944 and applied to series regulator Q906. Transistor Q908 compares a sample of the output voltage picked off across R956 with reference voltage supplied by voltage stabilizer D917.

A change in output voltage is detected at the base of Q908 and therefore alters collector voltage.


Since the collector of Q908 is directly coupled to the base of Q907, the change in output voltage alters the conduction of Q907 and Q906 by the amount necessary to maintain the output voltage constant. An increase in output voltage causes an increase in the impedance (decrease in conduction) of Q906, and vice versa.

The dc output voltage supplied to the preamplifier section is therefore, extremely stable.

1-3. LEVEL DIAGRAM

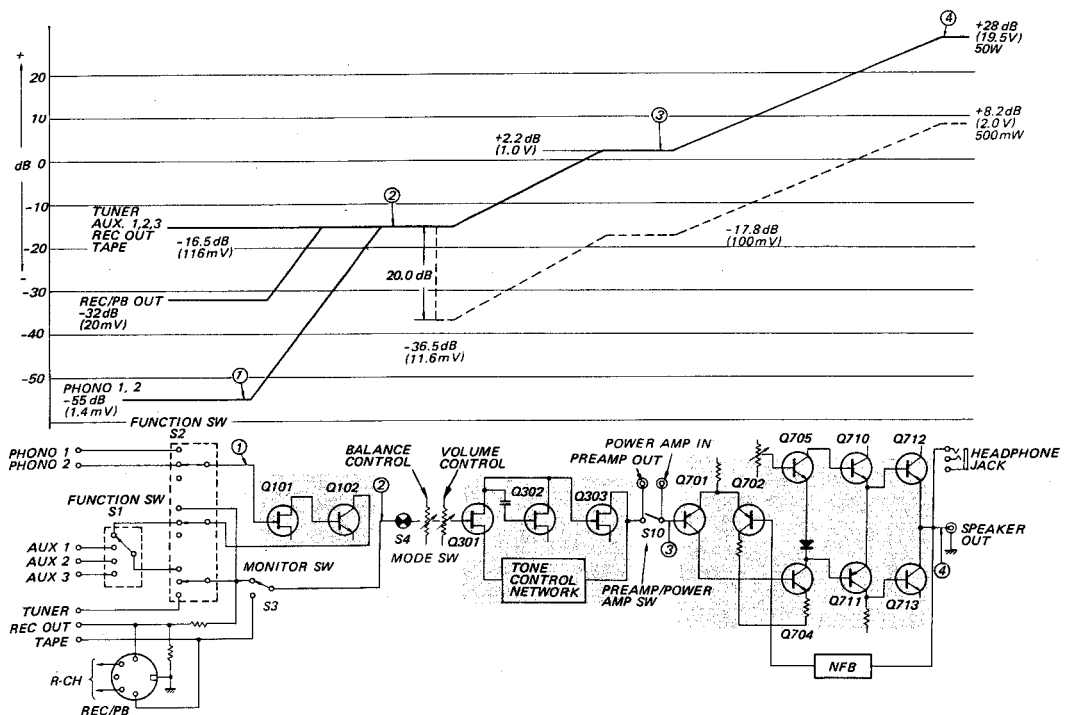

1-4. BLOCK DIAGRAM

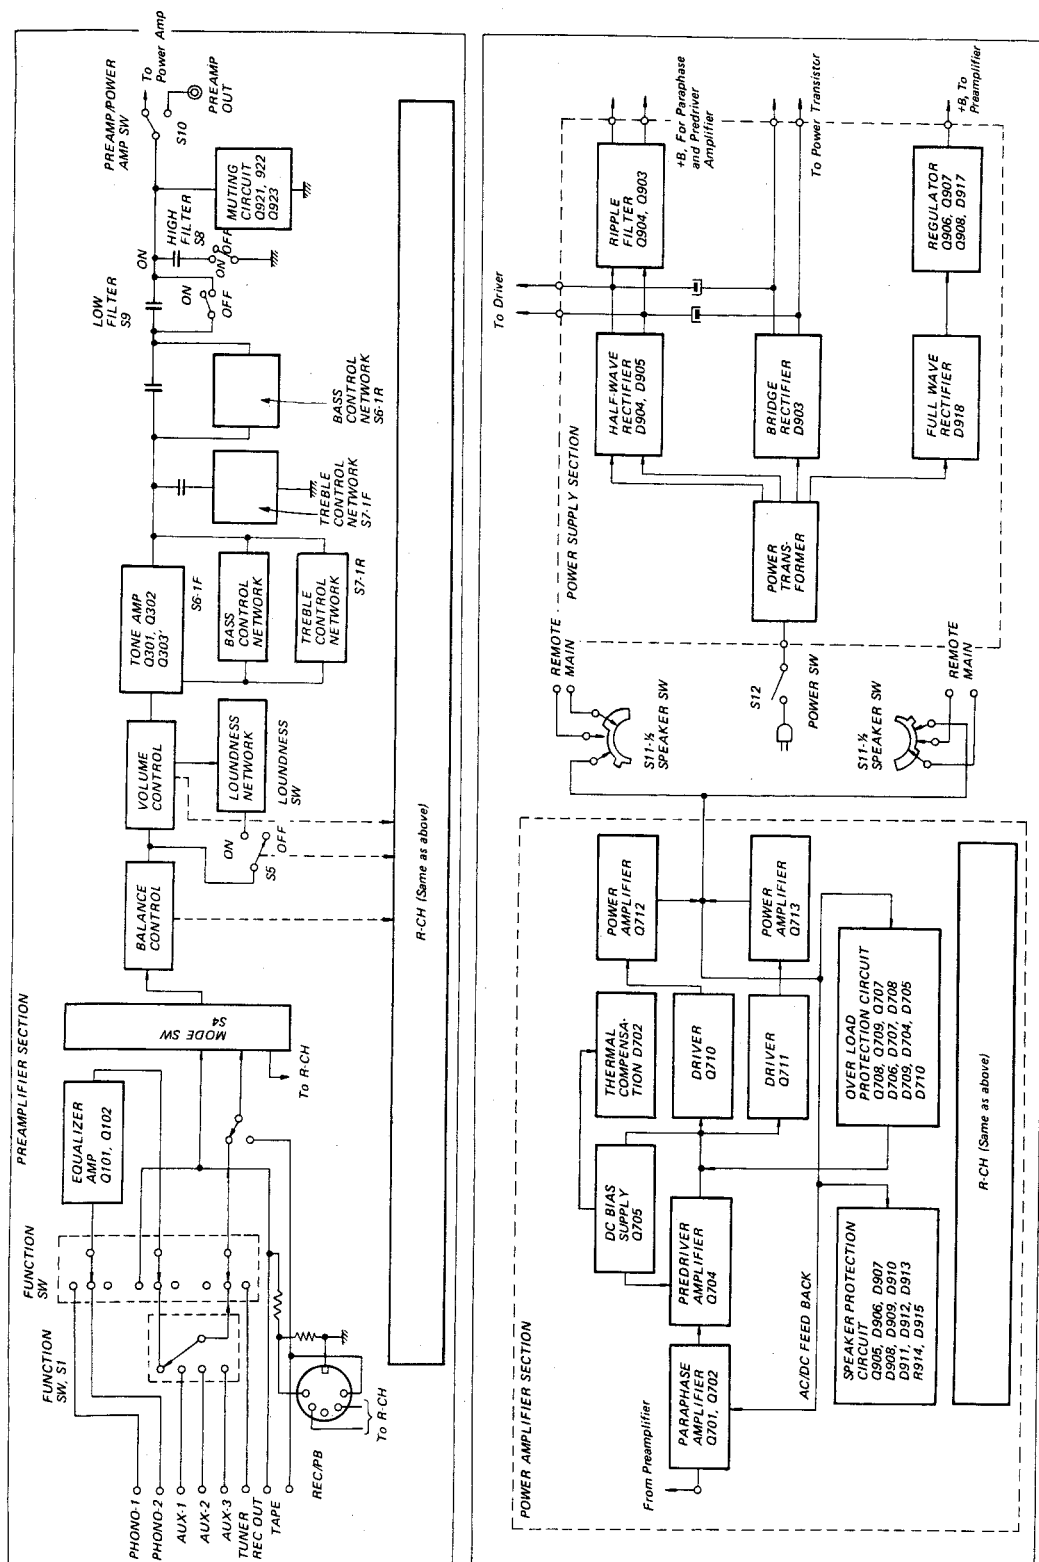

SECTION 2

DISASSEMBLY AND REPLACEMENT PROCEDURES

WARNING

Unplug the ac power cord before starting any disassembly or replacement procedures.

2-1. TOOLS REQUIRED

The following tools are required to perform disassembly and replacement procedures on the TA-1130.

1. Screwdriver, Phillips-head
2. Screwdriver, 3 mm ($\frac{1}{8}$ ") blade
3. Pliers, long-nose
4. Diagonal cutters
5. Wrench, adjustable
6. Tweezers
7. Electric drill
8. Drill bits
9. Prick punch
10. Hammer, ball-peen
11. Soldering iron, 40 to 50 watts
12. Solder, rosin core
13. Cement solvent
14. Cement, contact
15. Silicone grease

2-2. HARDWARE IDENTIFICATION GUIDE

The following chart will help you to decipher the hardware codes given in this service manual.

Note: All screws in the TA-1130 are manufactured to the specifications of the International Organization for Standardization (ISO). This means that the new and old screws are not interchangeable because ISO screws have a different number of threads per mm compared to the old ones. The ISO screws have an identification mark on their heads as shown in Fig. 2-1.


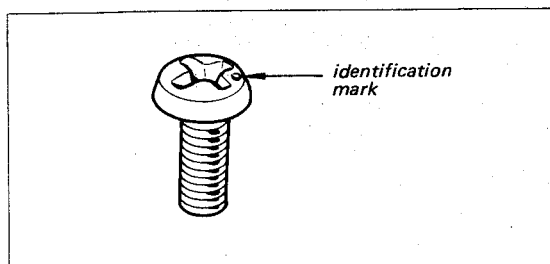


Fig. 2-1 ISO screw

Hardware Nomenclature

P	— Pan Head Screw		
PS	— Pan Head Screw with Spring Washer		
K	— Flat Countersunk Head Screw		
B	— Binding Head Screw		
RK	— Oval Countersunk Head Screw		
T	— Truss Head Screw		
R	— Round Head Screw		
F	— Flat Fillister Head Screw		
SC	— Set Screw		
E	— Retaining Ring (E Washer)		
	W — Washer		
	SW — Spring Washer		
	LW — Lock Washer		
	N — Nut		

Example

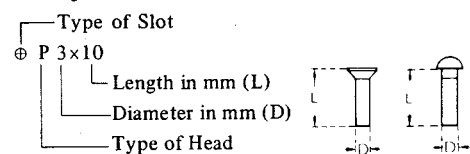

2-3. TOP COVER AND FRONT PANEL REMOVAL

1. Remove the two machine screws at each side of the case, and lift off the top cover.
2. Remove all control knobs and levers.
The knobs can be removed by loosening the slotted set screws and pulling the knobs straight out.
The levers are simply pulled off.
3. Remove the three screws (+PSW 4x6) behind the top edge of the front subchassis as shown in Fig. 2-2.
4. Remove the three self-tapping screws (+B 3x6) at the front bottom of the chassis as shown in Fig. 2-3. This frees the front panel.

2-4. FRONT SUBCHASSIS REMOVAL

The front subchassis is the vertical member on which all the controls, switches, and pilot lamp are attached.

1. Remove the top cover and front panel as described in Procedure 2-3.
2. Remove the two screws ($\oplus B 3 \times 6$) at each side of the chassis (see Fig. 2-5) and four self-tapping screws ($\oplus B 3 \times 6$) at the front bottom of the chassis as shown in Fig. 2-3. This frees front subchassis as shown in Fig. 2-4.

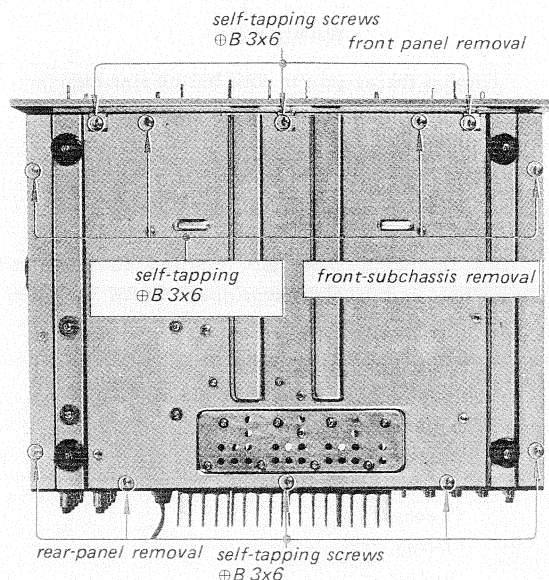


Fig. 2-3 Bottom view

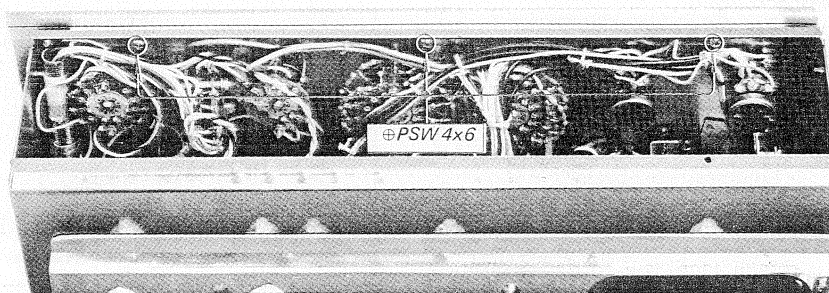


Fig. 2-2 Front-panel removal

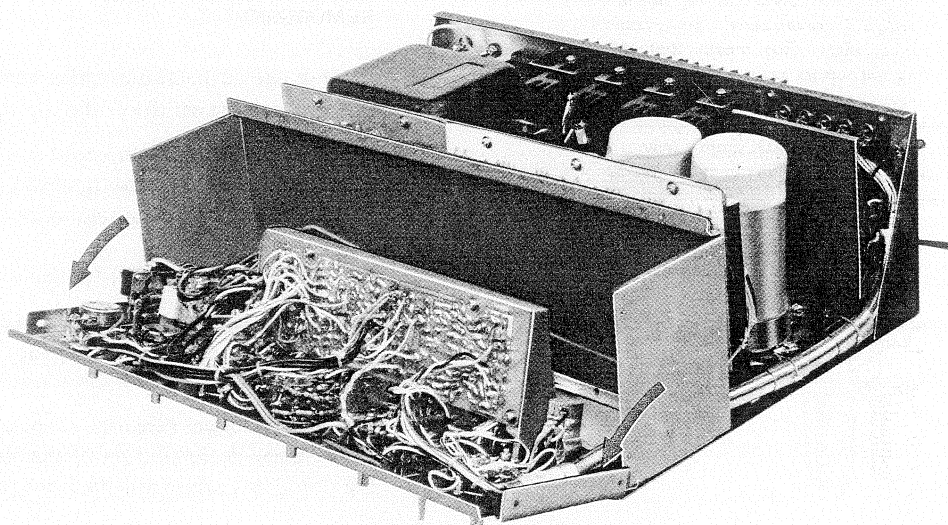


Fig. 2-4 Front subchassis removal

2-5. CONTROL AND SWITCH REPLACEMENT

Prepare for replacing any of the controls or switches by removing the front subchassis as described in Procedure 2-4.

POWER, LOW FILTER, HIGH FILTER, LOUDNESS, MONITOR and FUNCTION (2) Switches

1. Remove the two screws (\oplus PS 3 \times 5) securing switches to the front subchassis as shown in Fig. 2-5.
2. Unsolder the lead wires from the defective switch, and then install the replacement switch.

SPEAKER, MODE, FUNCTION (1) Switches and VOLUME, BALANCE, BASS and TREBLE Controls

1. Remove the hex nuts that secure the switches or controls to the front subchassis as shown in Fig. 2-5.
2. Unsolder the lead wires from the defective switch or control, and then install the new one.

HEADPHONE, AUX-3 Jacks

1. Remove the two screws (\oplus B 3 \times 6) securing the jack escutcheon to the front subchassis.
2. Unsolder the lead wires from the defective jack, and then install the new one.

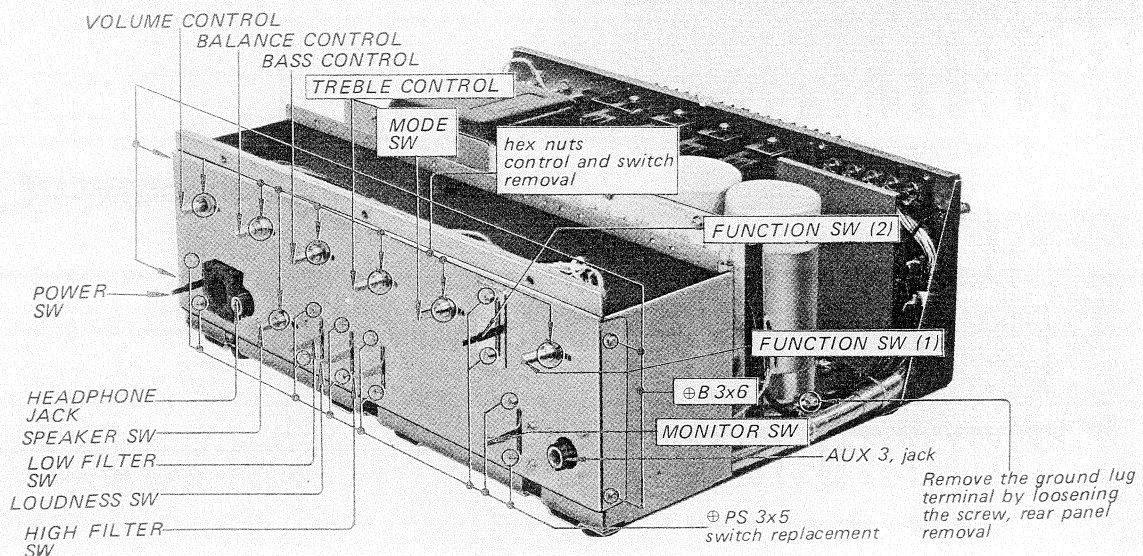


Fig. 2-5 Control and switch replacement

2-6. REAR PANEL REMOVAL

1. Remove the top cover as described in Procedure 2-3.
2. Remove the four screws (\oplus B 3 \times 6) at each side of the chassis (see Fig. 2-6) and five self-tapping screws (\oplus B 3 \times 6) at the rear bottom of the chassis as shown in Fig. 2-3.
3. Remove the power amplifier board, and then unsolder the lead wires coming from the NORMAL/SEPARATE switch.
4. Remove the ground lug terminal by loosening the screw securing the electrolytic capacitor (C923) bracket to the chassis as shown in Fig. 2-5.
5. Unhook the flexible conduit from the clamp located inside the rear panel, and then cut the strings tying the lead wires to the rear jacks together. This frees the rear panel.

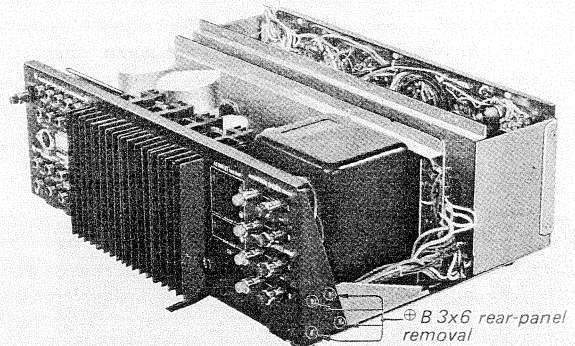


Fig. 2-6 Rear panel removal

2-7. POWER TRANSISTOR REPLACEMENT

1. Remove the top cover as described in Procedure 2-3.
2. Remove the four self-tapping screws ($\oplus B 3 \times 8$) securing the top heat-sink bracket as shown in Fig. 2-7.
3. Remove the four self-tapping screws ($\oplus B 3 \times 8$) securing the pair of heat sinks to the chassis as shown in Fig. 2-8.
4. Carefully draw back the pair of heat sinks, and then remove the two screws ($\oplus B 3 \times 14$) and nuts securing the power transistor to the heat sink. See Fig. 2-9.
5. Cut the emitter and base leads of the defective power transistor with a diagonal cutter. This prevents mica washer damage when removing the defective power transistor.
6. When replacing the power transistor, apply a coating of a heat-transferring grease to both sides of the insulating mica washer. Any excess grease squeezed out when the mounting bolts are tightened should be wiped off with a clean cloth. This prevents it from accumulating conductive dust particles that might eventually cause a short.

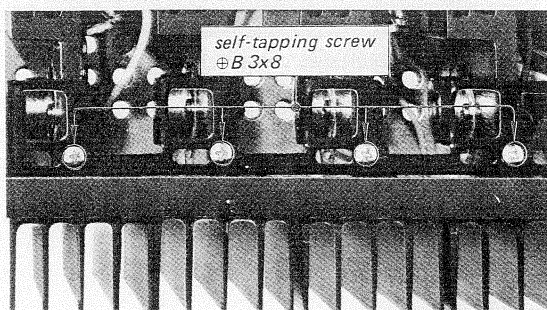


Fig. 2-7 Top heat sink removal

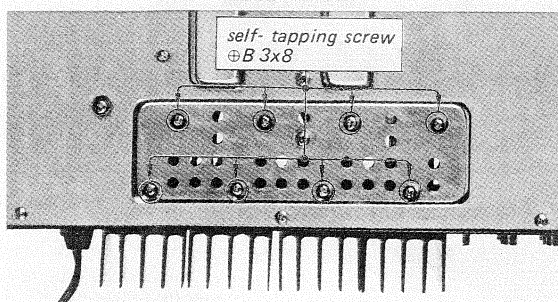


Fig. 2-8 Heat sink removal

2-8. REPLACEMENT OF COMPONENTS SECURED TO THE REAR PANEL BY RIVETS

1. Remove the rear panel as described in Procedure 2-6.
2. Bore out the rivets using a drill bit slightly larger in diameter than the rivet. See Fig. 2-10.
3. Punch out the remainder of the rivet with a nail set or prick punch.
4. Remove the defective component, and then install a new one.
5. Secure the new component with a suitable screw and nut, or a repair rivet screw (part number 3-701-402).

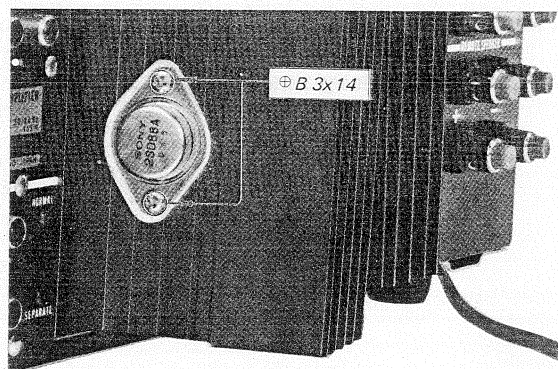


Fig. 2-9 Power transistor removal


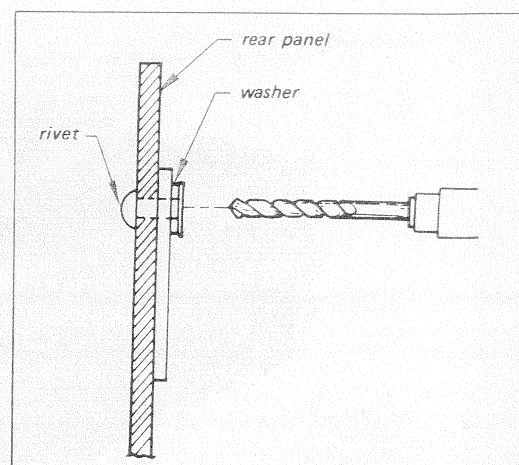



Fig. 2-10 Rivet removal

2-9. CHASSIS LAYOUT

General Export Model

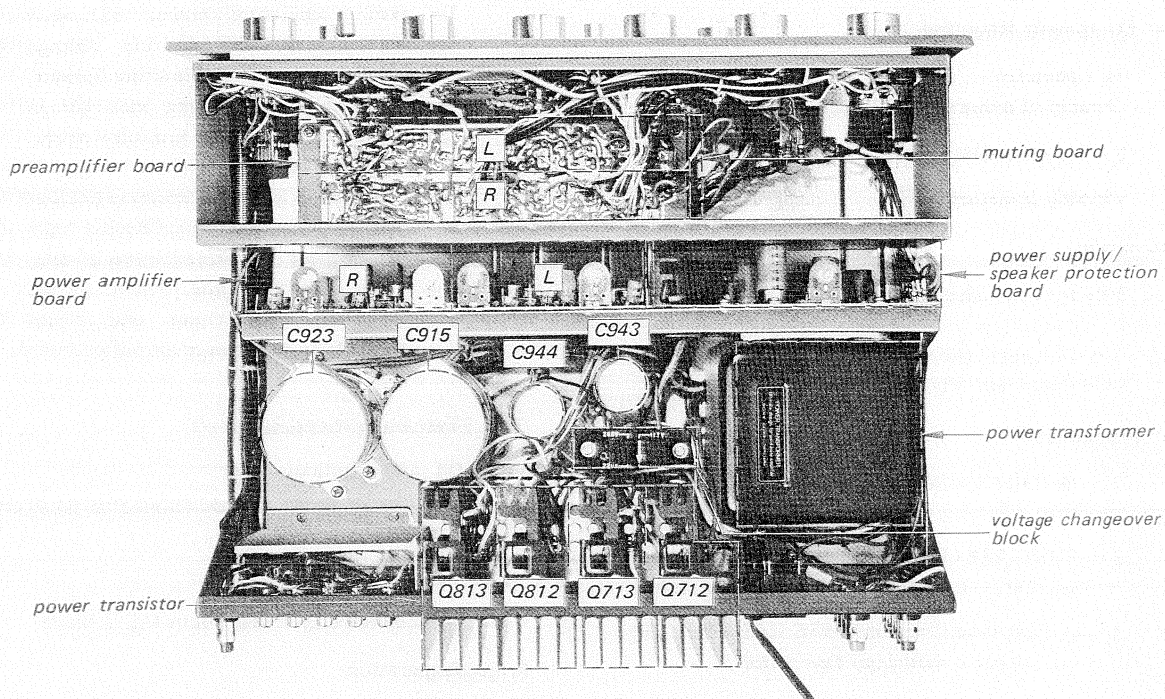

GEP and NEP Model

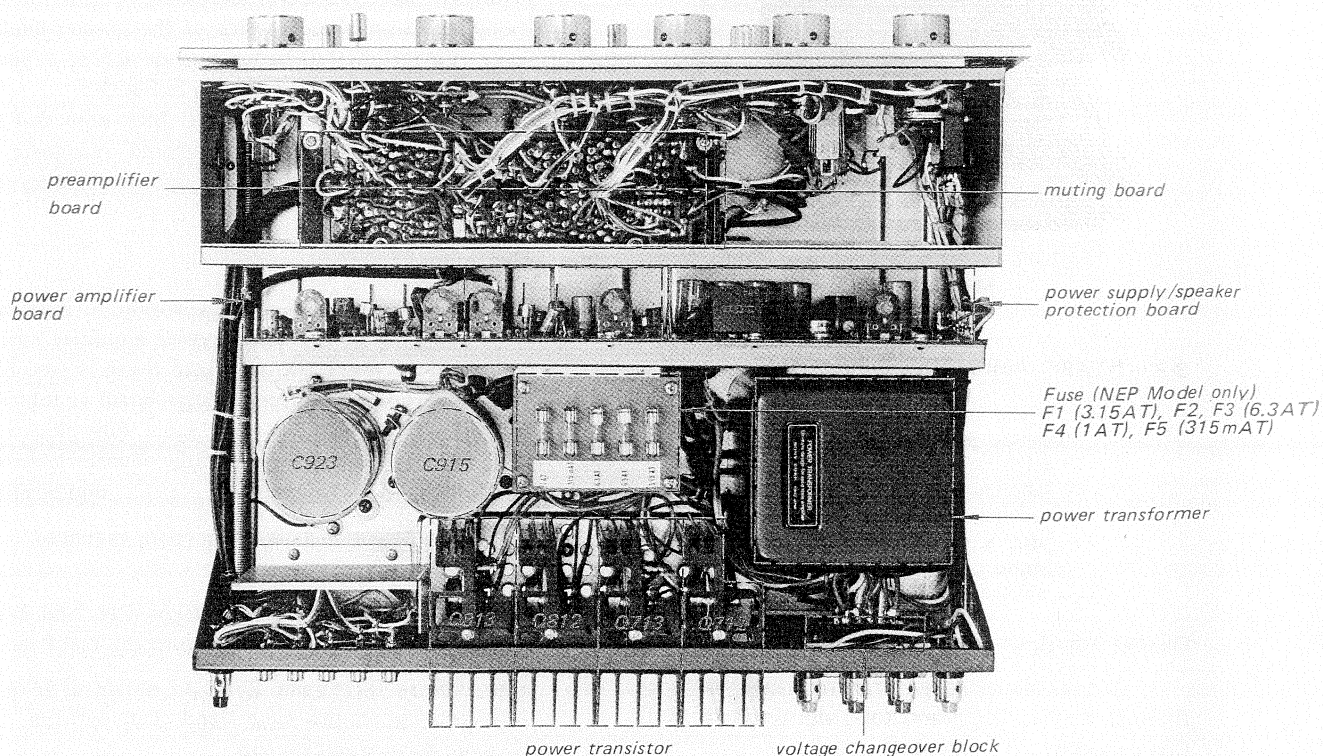

SECTION 3 ADJUSTMENTS

3-1. POWER SUPPLY VOLTAGE ADJUSTMENT FOR PREAMPLIFIER SECTION

Test Equipment Required

1. Dc voltmeter:
Capable of measuring 40V dc or more.
2. Screwdriver with 3 mm ($\frac{1}{8}$ ") blade
3. Variable transformer

Preparation

1. Remove the top cover as described in Procedure 2-3.
Connect the dc voltmeter to the test point as shown in Fig. 3-1.

Procedure

1. Set the variable transformer for minimum output.
2. Turn the POWER switch to ON, and then increase the line voltage up to the rated value.
3. Adjust semifixed resistor R956 (see Fig. 3-1) to obtain a 40V reading on the meter.

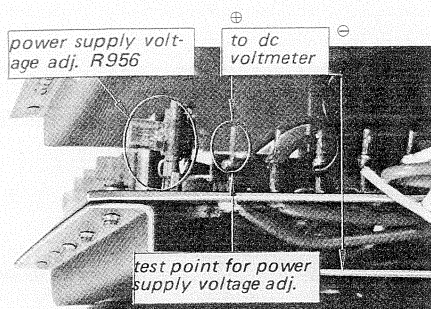


Fig. 3-1 Dc voltmeter connection and parts location

3-2. POWER AMPLIFIER ADJUSTMENTS

Note: There are two adjustments to be made in the power amplifier. One is dc-bias adjustment and the other is dc-balance adjustment. These adjustments should be alternately repeated two or three times after replacing any of the power transistors until the best operation is obtained.

Dc-bias Adjustment

Serious deficiencies in performance, such as thermal runaway of power transistors, will result if this adjustment is improperly set.

CAUTION

To avoid accidental power transistor damage, increase the ac line voltage gradually, using a variable transformer, while alternately measuring the voltage across test points and the hot side of the speaker binding post (emitter resistors R736 and R836 of the power transistors) as shown in Fig. 3-2. Check to see that the reading does not exceed 25 mV. If it does, turn off the power as soon as possible, then check and repair the trouble in the power amplifier board.

Test Equipment Required

1. Dc millivoltmeter:
Capable of measuring dc voltage of 100mV or less.
2. Variable transformer
3. Screwdriver with 3mm ($\frac{1}{8}$ ") blade

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Connect the dc millivoltmeter across the test point and the hot side of the speaker binding post (L-CH) (emitter resistor R736 of power transistor Q712) as shown in Fig. 3-2.
When measuring the R-CH bias, note that the dc millivoltmeter lead should reconnect to the R-CH hot side of the speaker binding post also.

Procedure

1. Apply a drop of cement solvent to the semifixed resistors on the power amplifier board, and then set the semifixed resistors (see Fig. 3-2) on the power amplifier board as follows:
R715 (L-CH, dc-bias) fully clockwise
R815 (R-CH, dc-bias) fully counterclockwise
R702, R802 (dc-balance) mid position
2. Set the variable transformer for minimum output.
3. Turn the POWER switch to ON, and then increase the line voltage up to the rated value.
4. Adjust R715 and R815 to obtain a 25 mV reading on the meter, and then perform the dc-balance adjustment.

Dc-Balance Adjustment

Excessive harmonic distortion at high levels or speaker system damage will result if this adjustment is improperly set.

Test Equipment Required

1. Dc null meter or dc millivoltmeter.
2. Screwdriver with 3mm ($1/8$ ") blade.

Preparation

1. Set the SPEAKER switch to MAIN.
2. Connect the dc null meter or dc millivoltmeter to the MAIN speaker output terminal.

Procedure

1. Turn the POWER switch to ON, and then adjust R702 (R802) to obtain a 0 V reading on the meter.
2. After 10 minutes warm-up, alternately repeat this and the dc-bias adjustment two or three times.
3. After completing the adjustments, apply a drop of lock paint to R715 and R702 (R815 and R802).

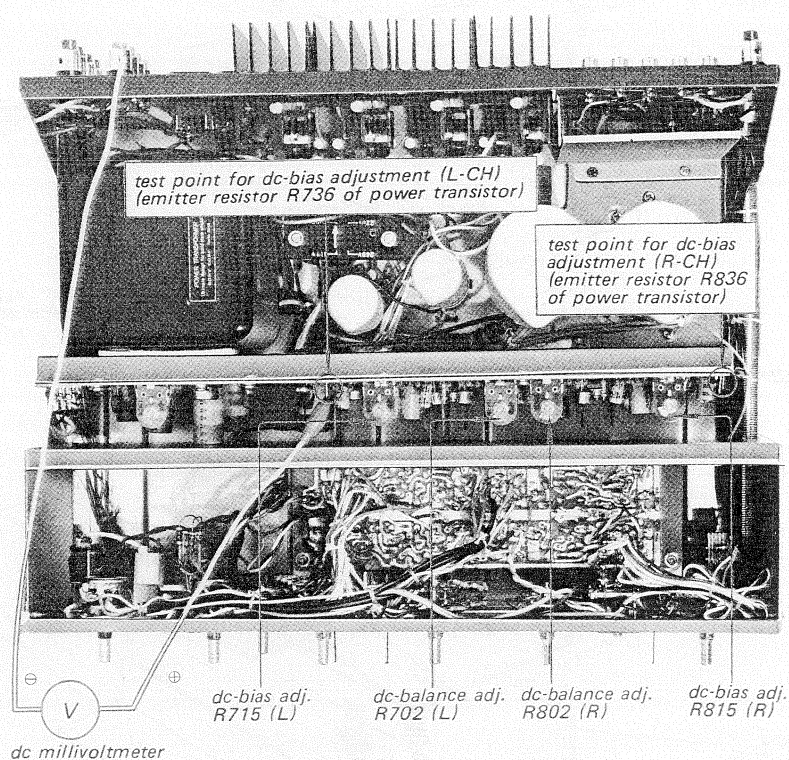


Fig. 3-2 Test points and adjustments

SECTION 4 REPACKING

The TA-1130's original shipping carton and packing materials are the ideal containers for shipping the unit. However to secure the maximum protection,

the TA-1130 must be repacked in these materials precisely as before. The proper repacking procedures are shown in Fig. 4-1.


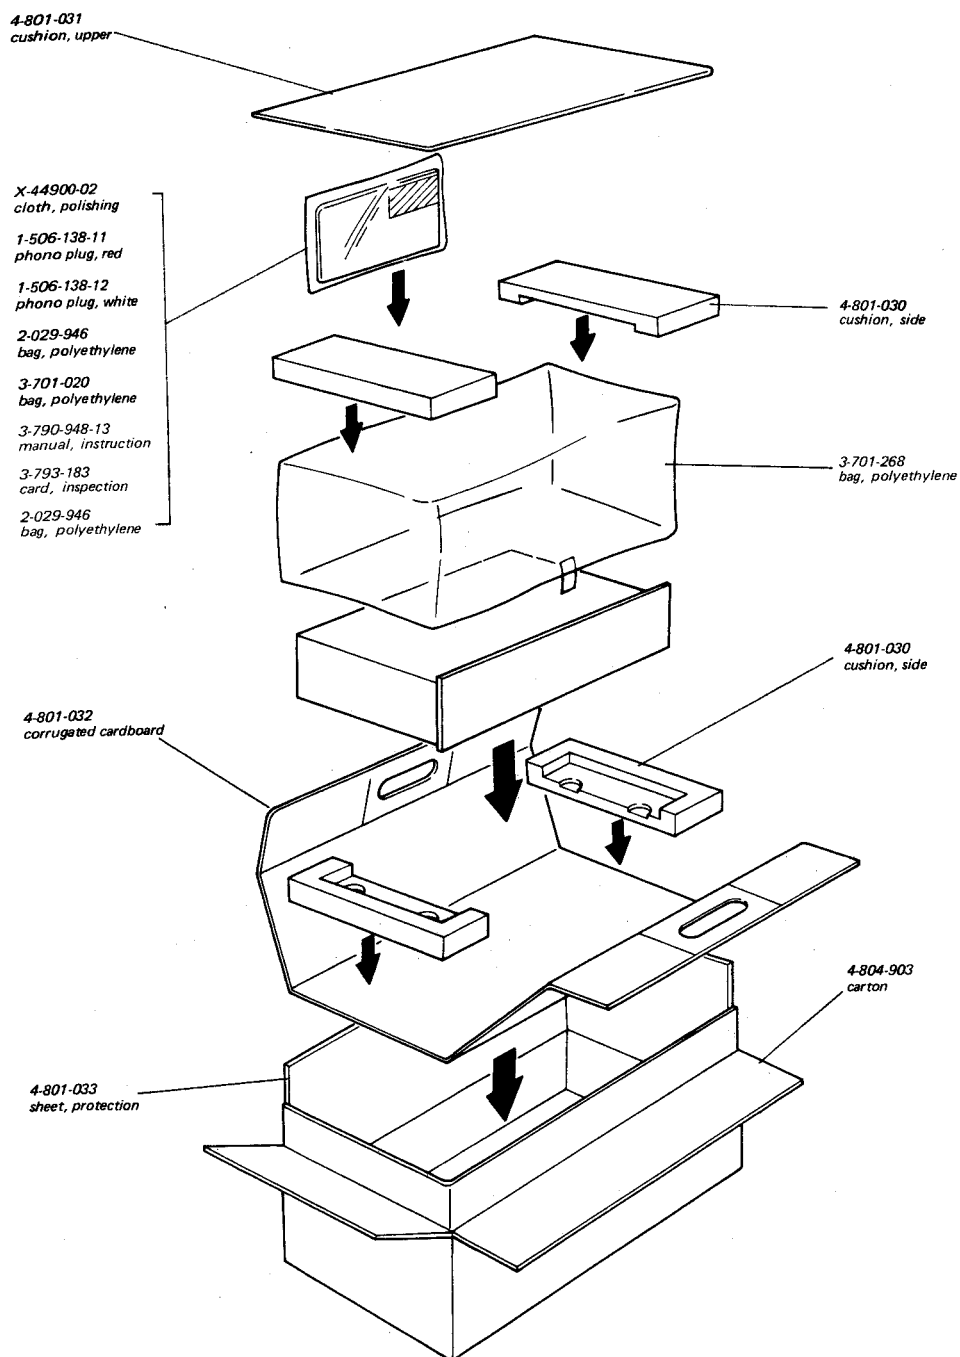


Fig. 4-1 Repacking


SECTION 5 DIAGRAMS

5-1. MOUNTING DIAGRAM — Muting Board —


— Conductor Side —

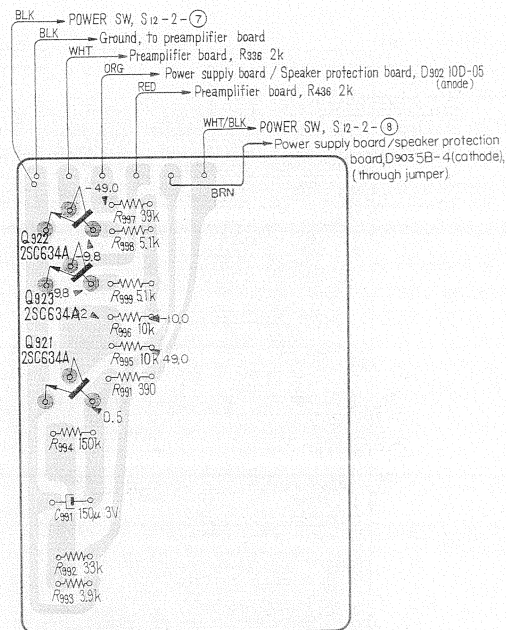

— Component Side —

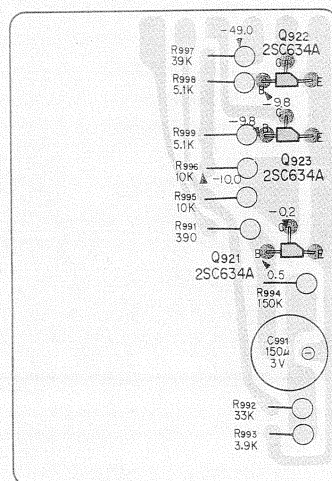


2SC634A

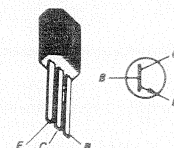


5-2. MOUNTING DIAGRAM — Preamplifier Board —

— Component Side —

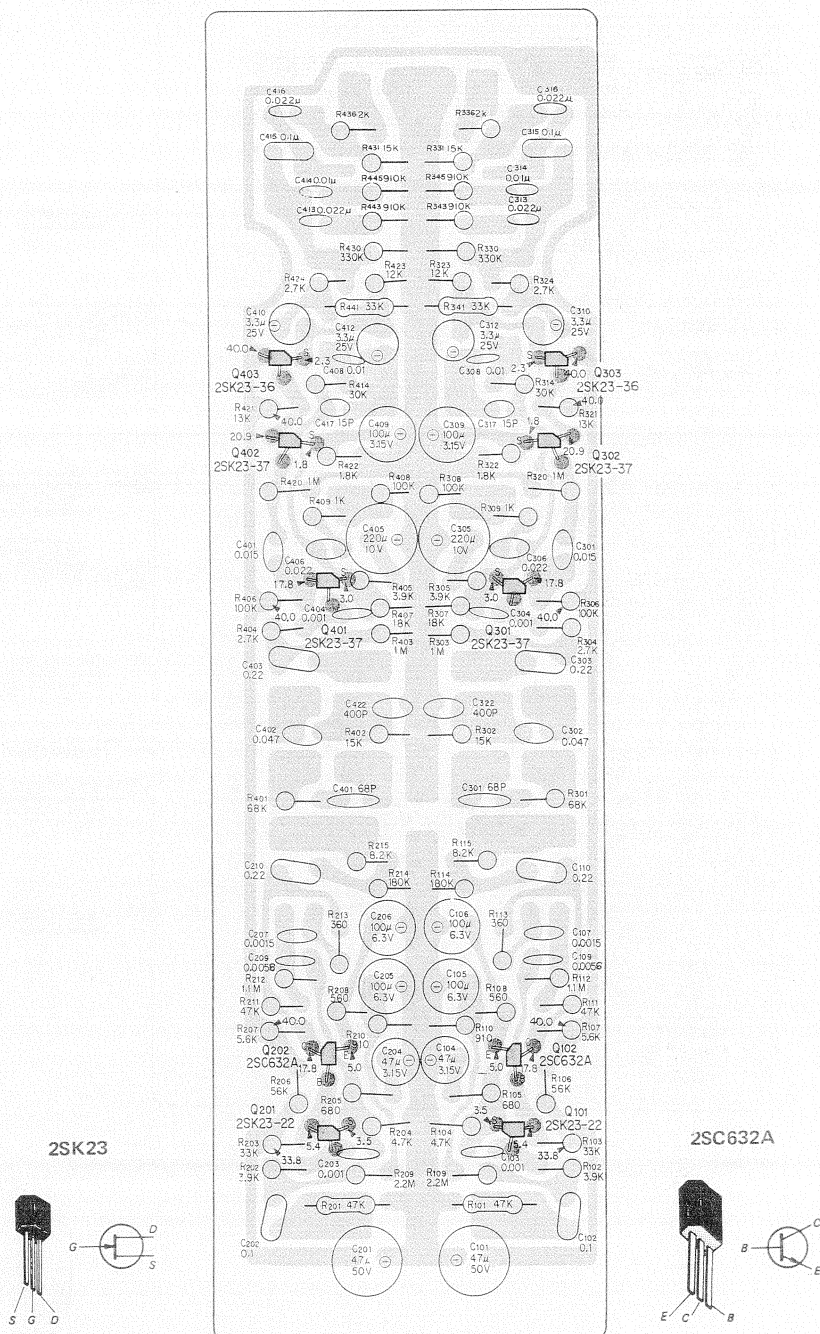


5-3. MOUNTING DIAGRAM – Power Amplifier Board –

– Conductor Side –

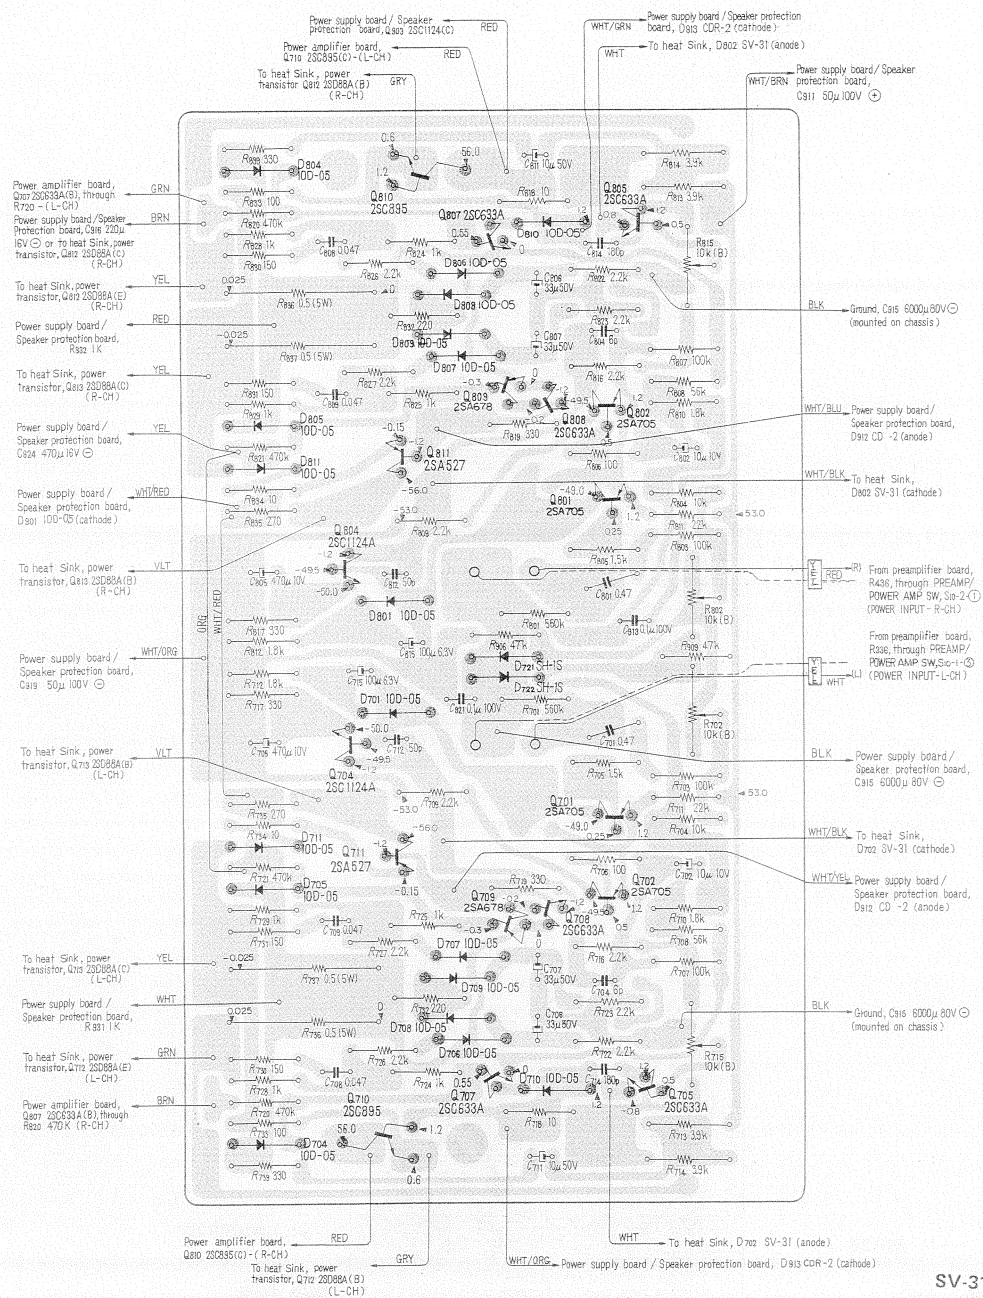


SV-31

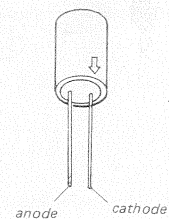


5-3. MOUNTING DIAGRAM — Power Amplifier Board —

— Component Side —

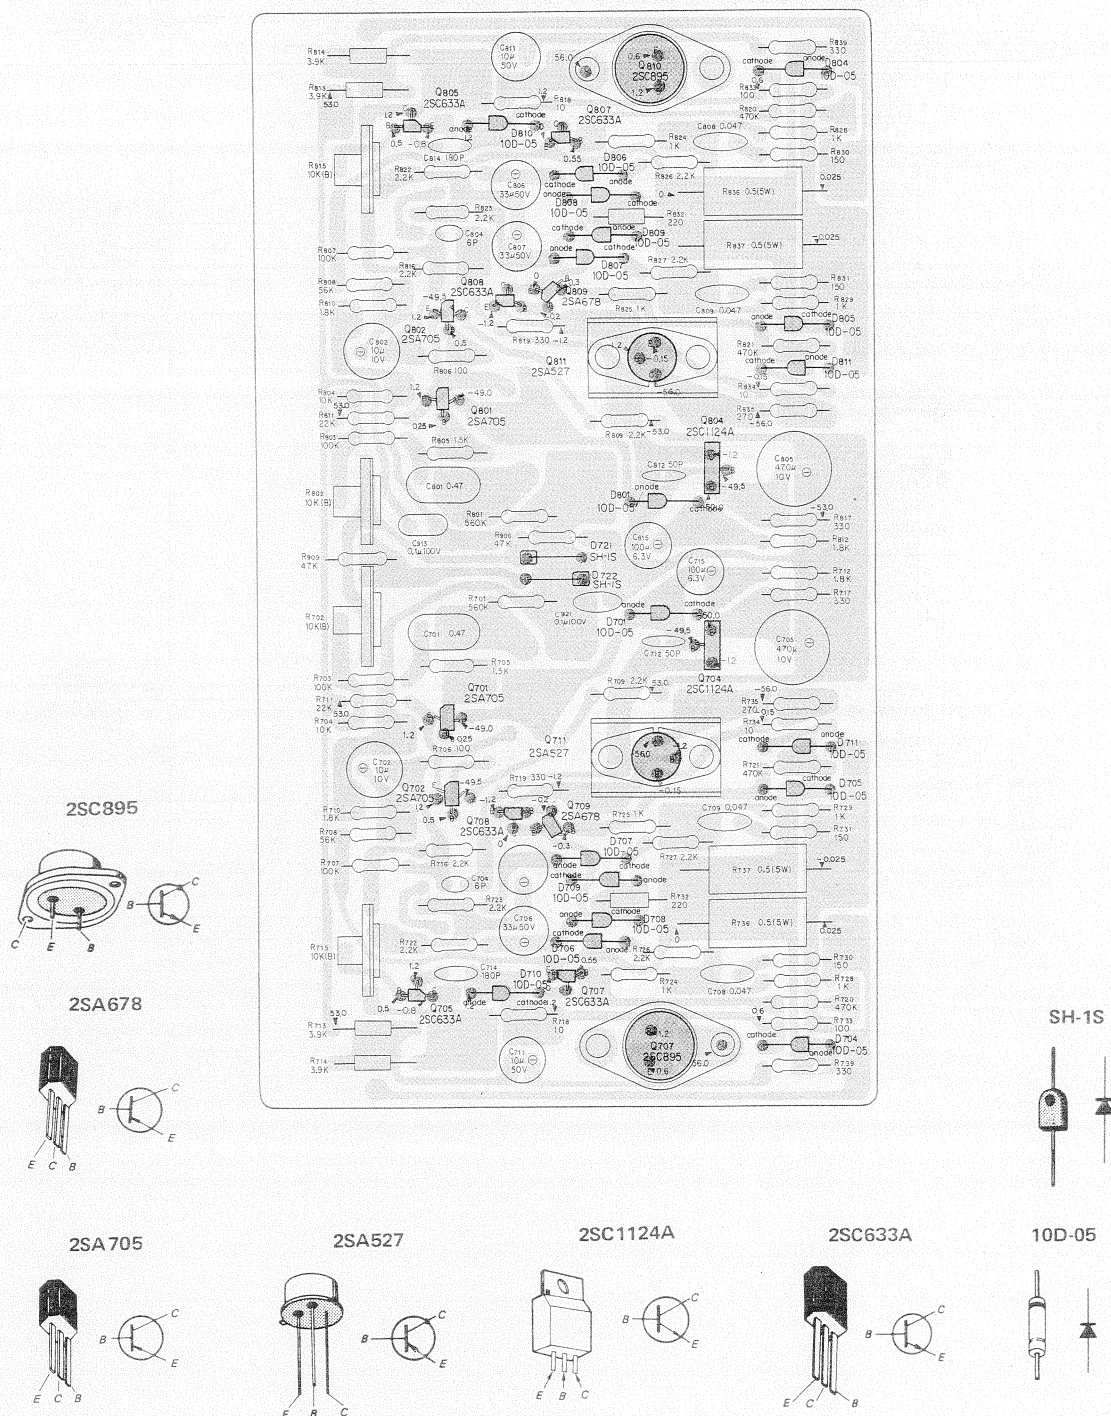


5-4. MOUNTING DIAGRAM — Power Supply/Speaker Protection Board —

— Conductor Side —

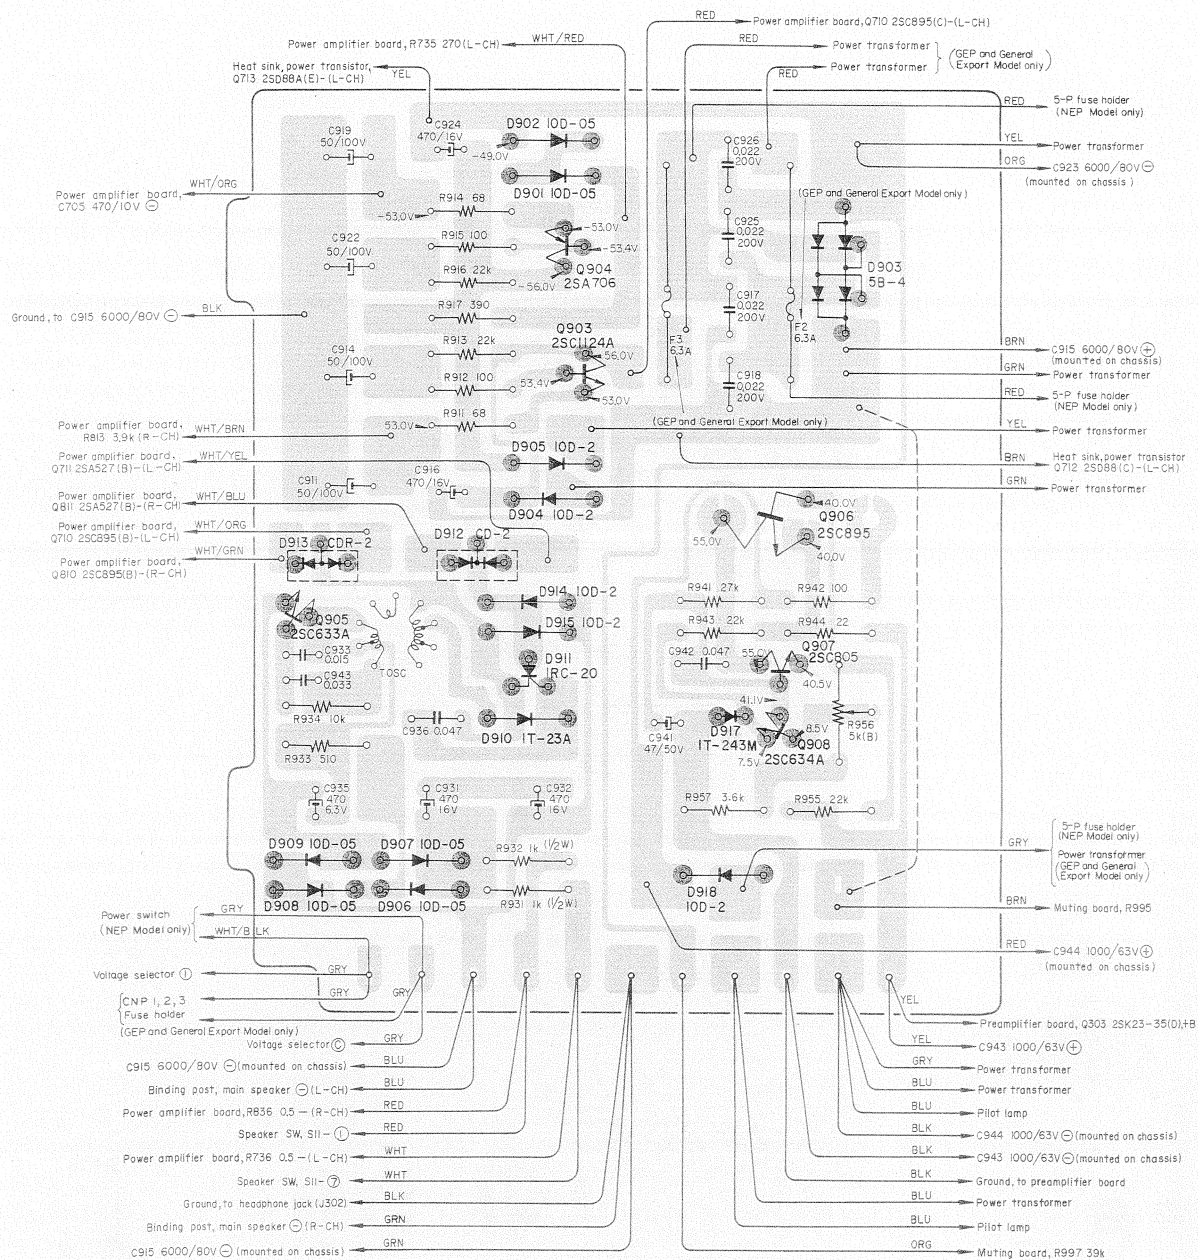

5-4. MOUNTING DIAGRAM — Power Supply/Speaker Protection Board —


— Component Side —

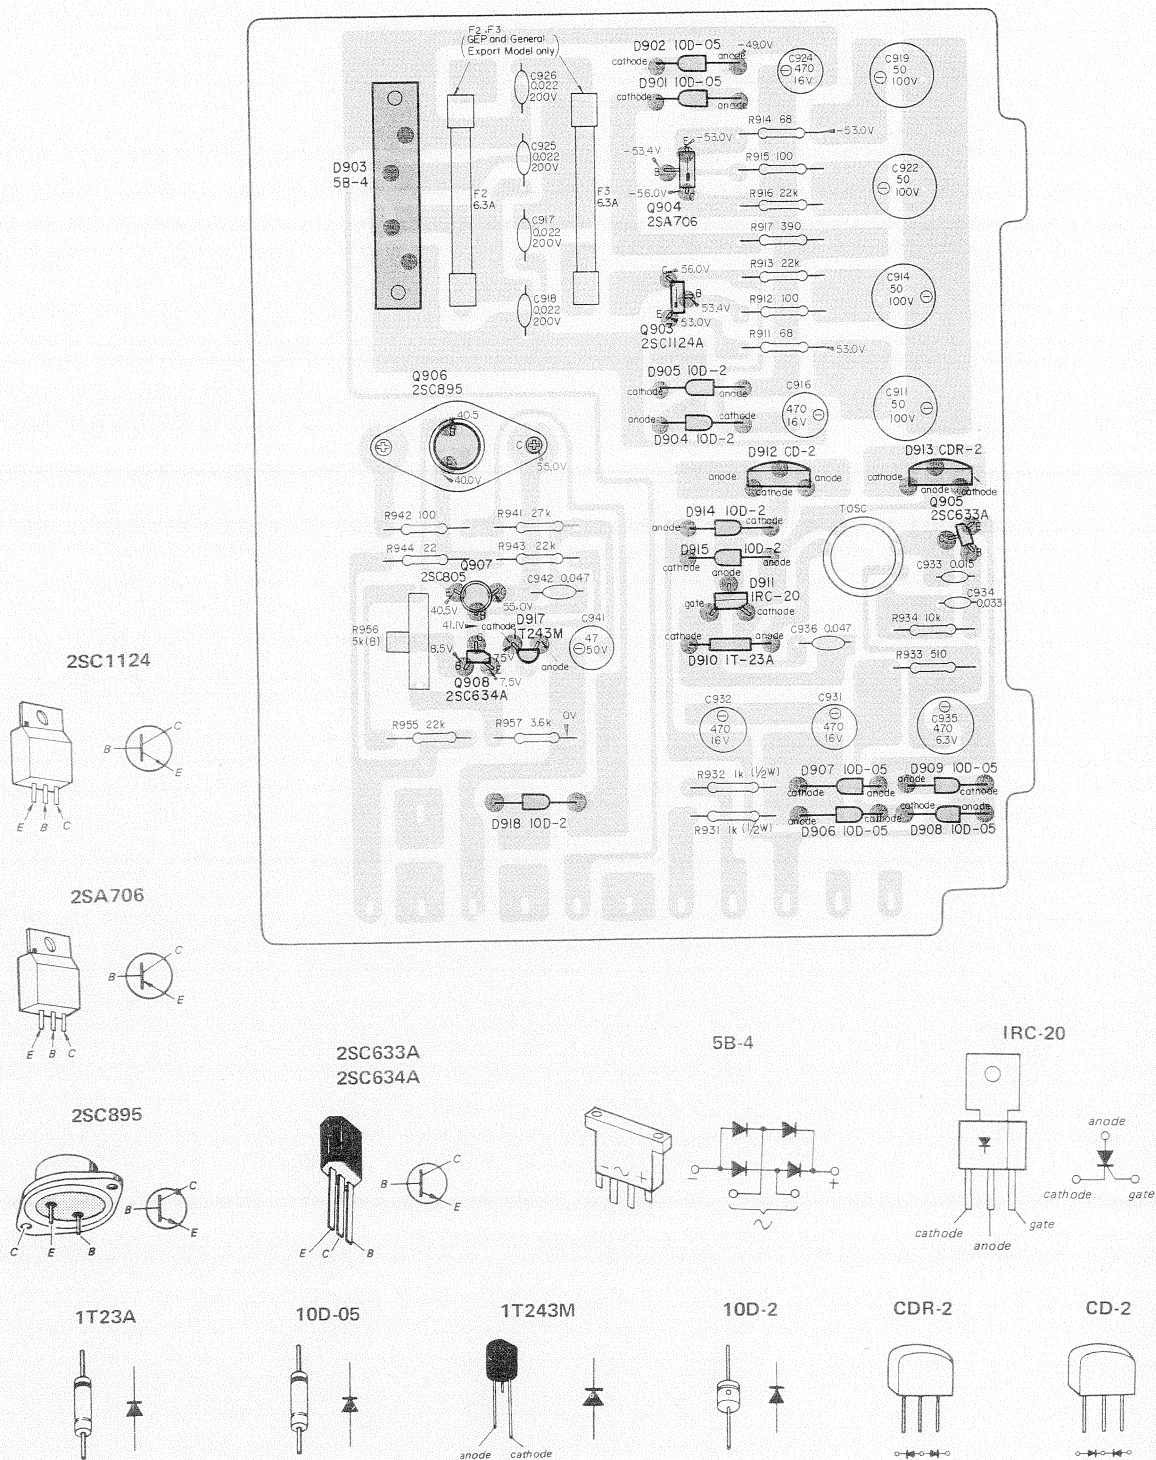

MEMO

Handwriting practice area with horizontal dotted lines.

5-5. SCHEMATIC DIAGRAM — Preamplifier Section —

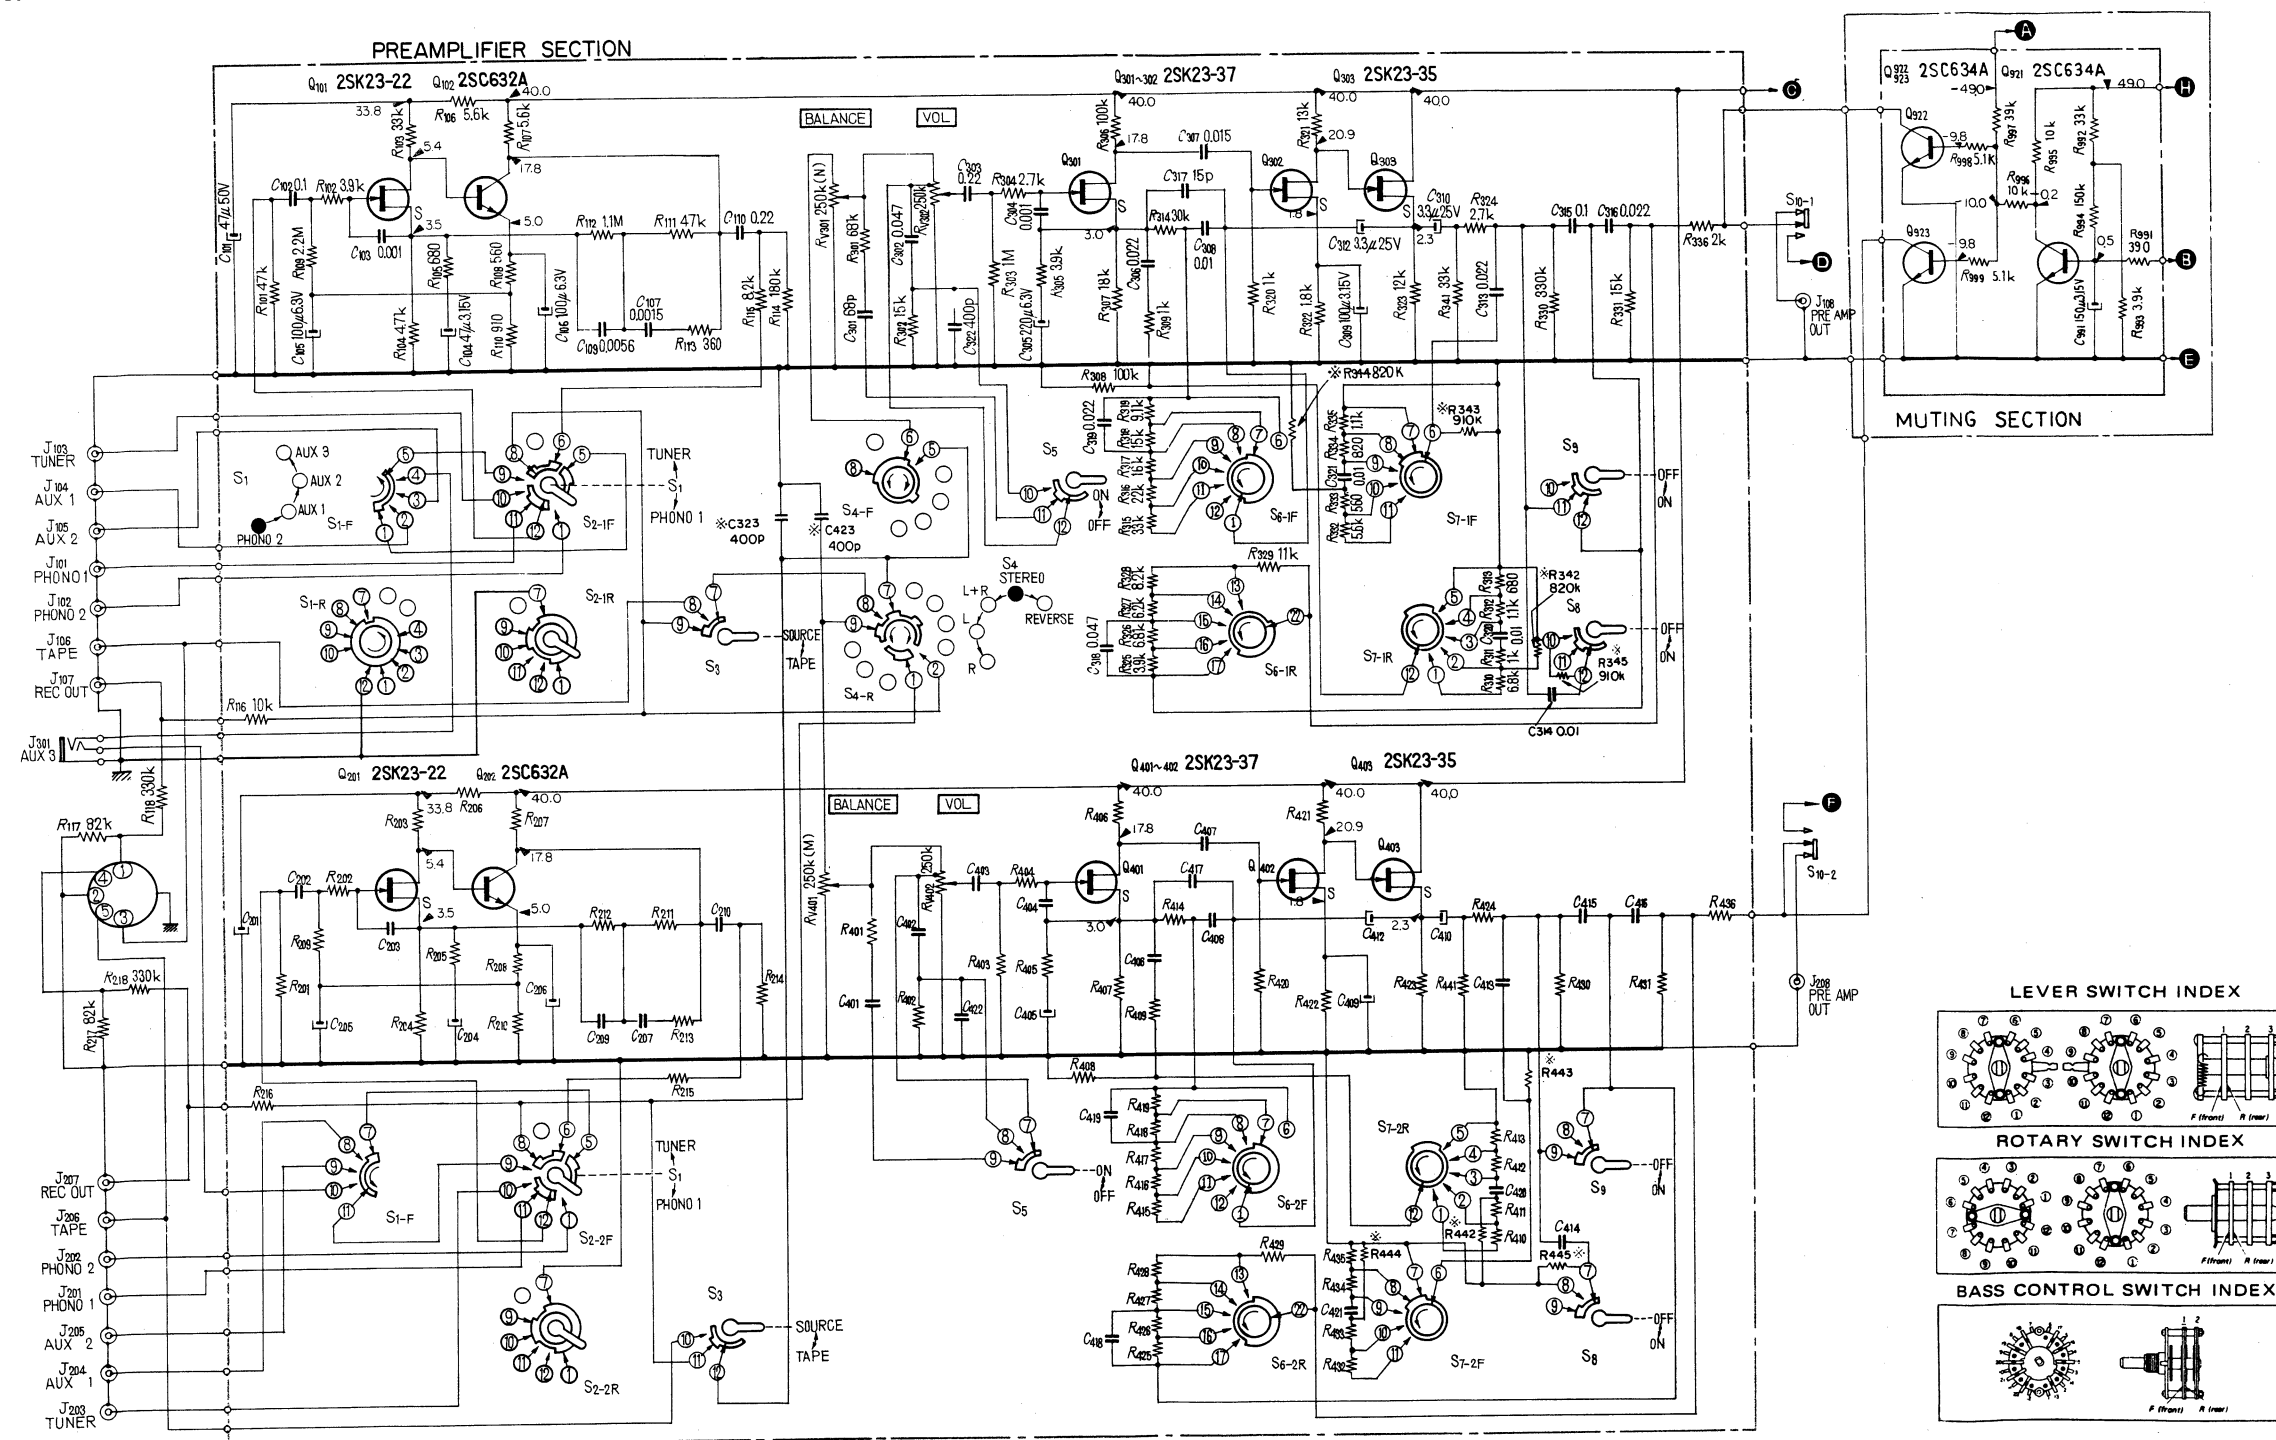


Ref. No.	Description	Position	Ref. No.	Description	Position	Ref. No.	Description	Position
S1	FUNCTION (1) SW (PHONO 2 - AUX 1 - AUX 2 - AUX 3)	PHONO 2	S4	MODE SW (REVERSE - STEREO - L+R - LEFT - RIGHT)	STEREO	S8	HIGH FILTER SW	OFF
S2	FUNCTION (2) SW (PHONO 1 - FUNCTION (1) - TUNER)	PHONO 1	S5	LOUDNESS SW	ON	S9	LOW FILTER SW	OFF
S3	MONITOR SW (SOURCE - TAPE)	SOURCE	S6	BASS CONTROL SW	-10 dB	S10	PREAMP/POWER AMP SW (SEPARATE - NORMAL)	SEPARATE
			S7	TREBLE CONTROL SW	-10 dB			

Note:
All resistance values are in ohms. k=1,000, M=1,000k
All capacitance values are in μ F except as indicated with p, which means μ F.
All voltages represent an average value and should hold within $\pm 20\%$.
All voltages are dc measured with a VOM which has an input impedance of 20k ohms/volt. No signal in.

TA-1130 TA-1130

5-6. SCHEMATIC DIAGRAM – Power Amplifier Section –

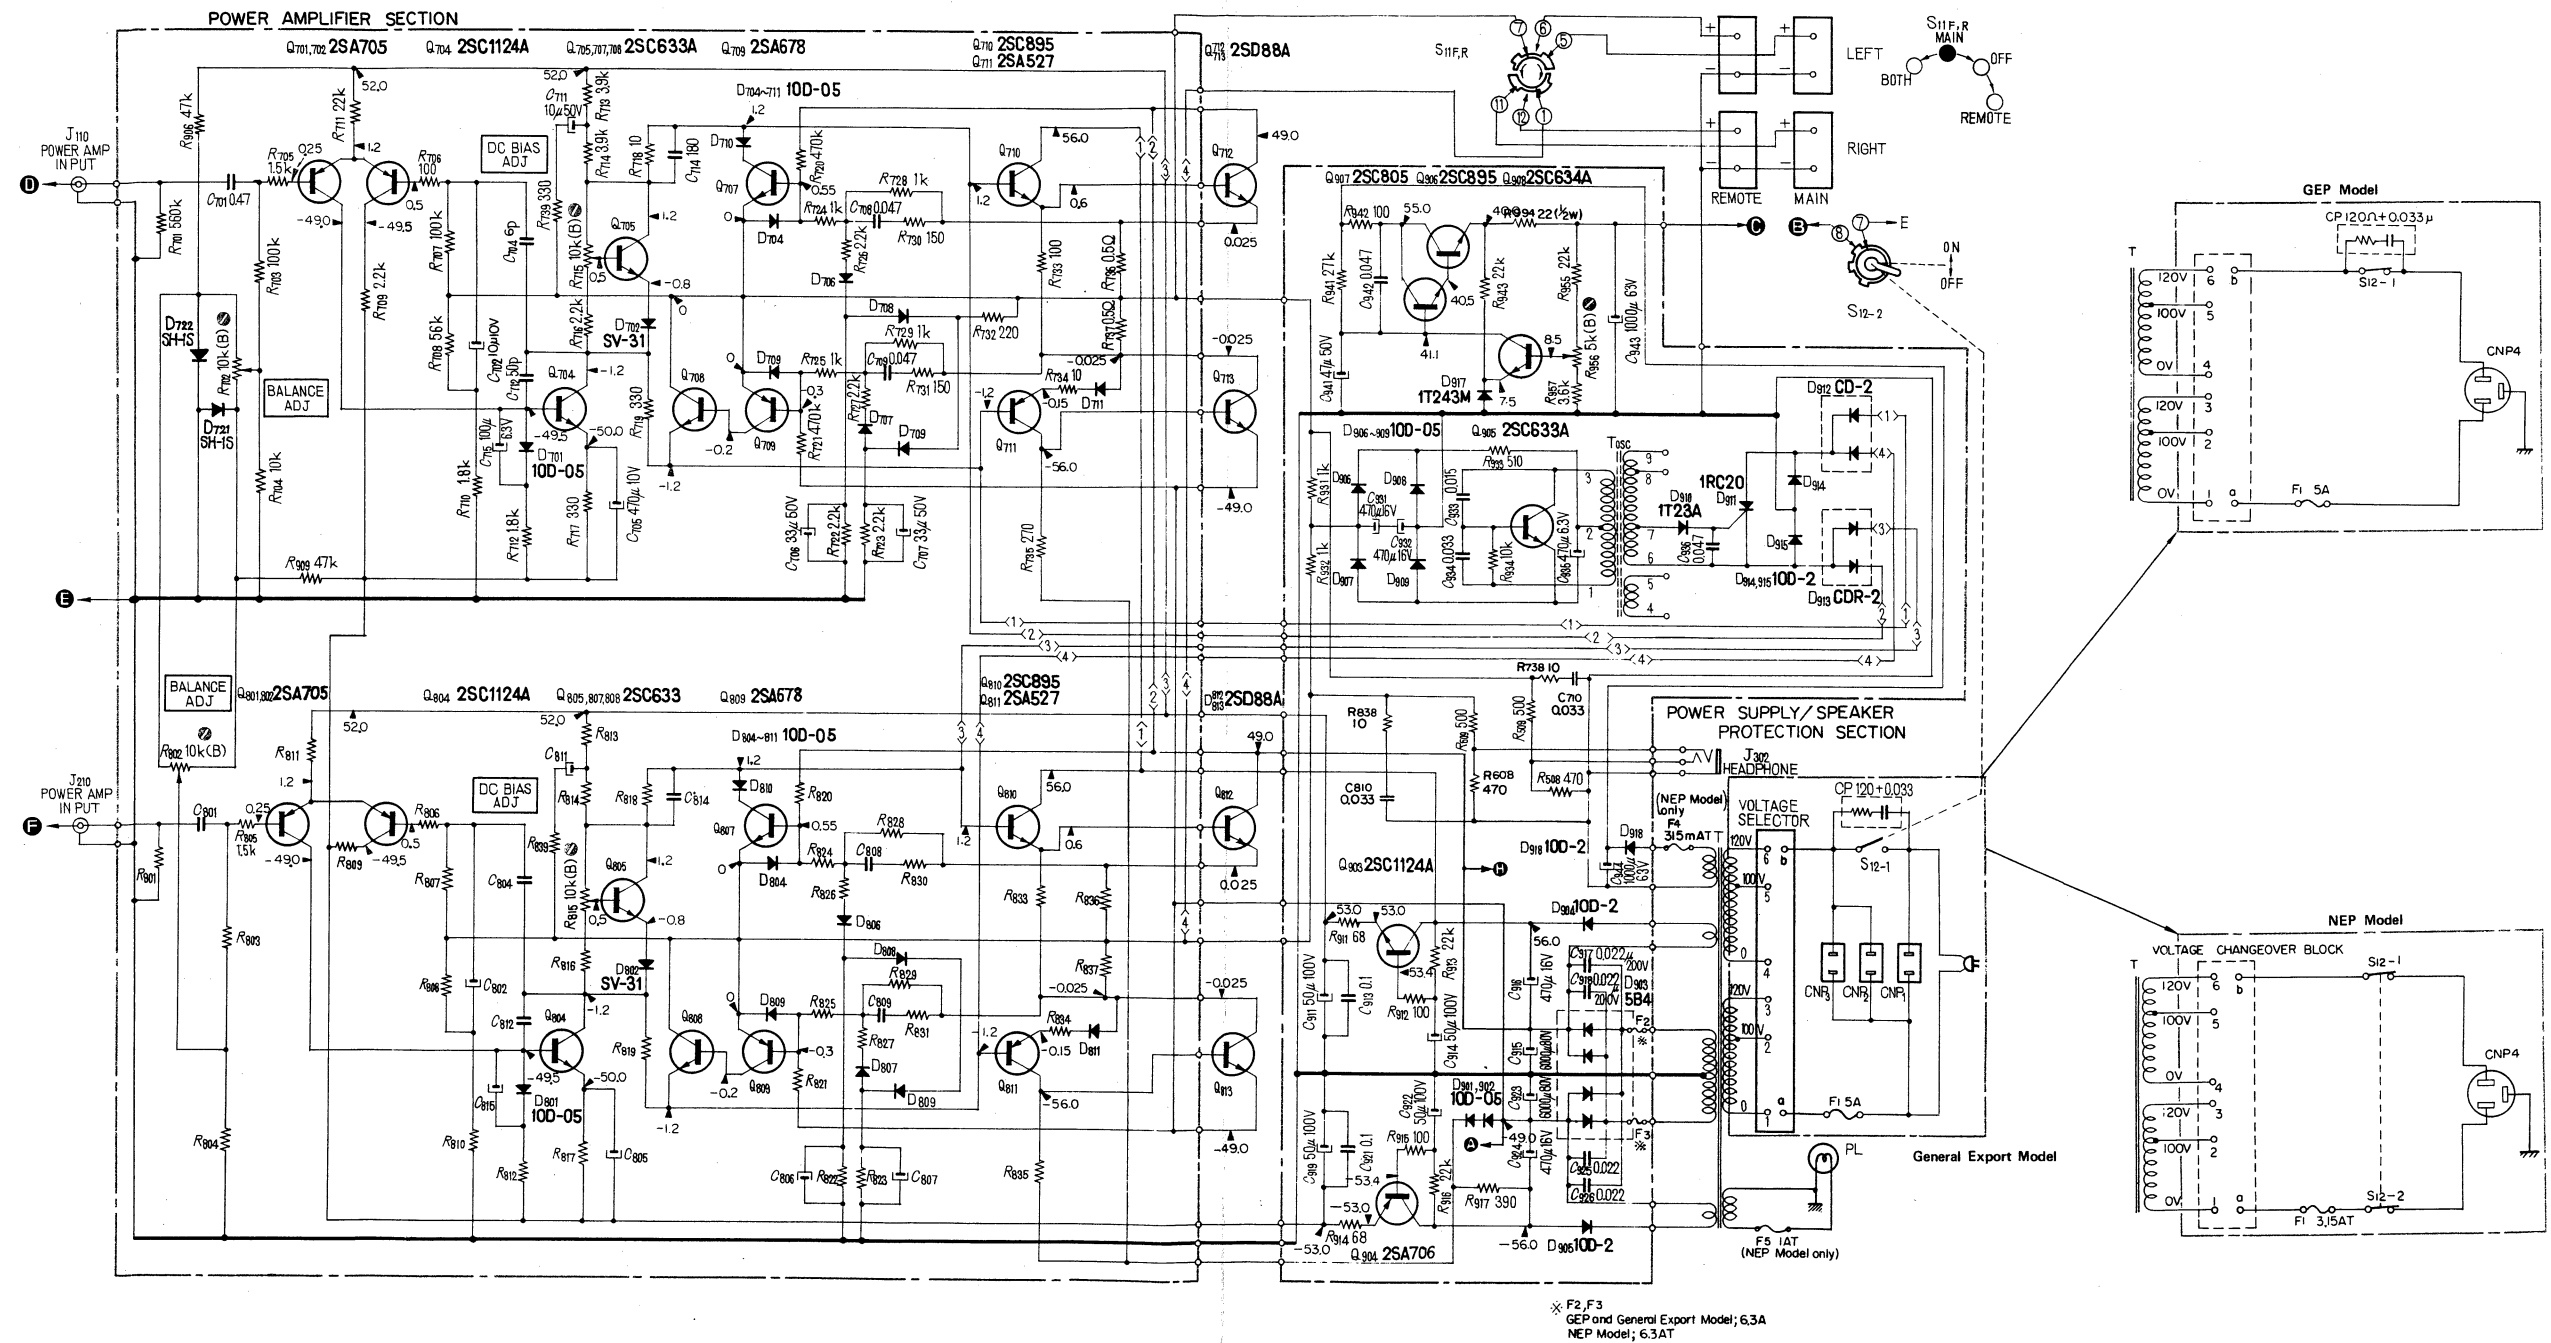



<u>Ref. No.</u>	<u>Description</u>	<u>Position</u>
S11	SPEAKER SW (REMOTE - OFF - MAIN - BOTH)	MAIN
S12	POWER SW (OFF - ON)	ON


Note:

- All resistance values are in ohms. $k = 1,000$, $M = 1,000k$
- All capacitance values are in μF except as indicated with p, which means μF .
- All voltages represent an average value and should hold within $\pm 20\%$.
- All voltages are dc measured with a VOM which has an input impedance of 20k ohms/volt. No signal in.

SECTION 6 EXPLODED VIEW

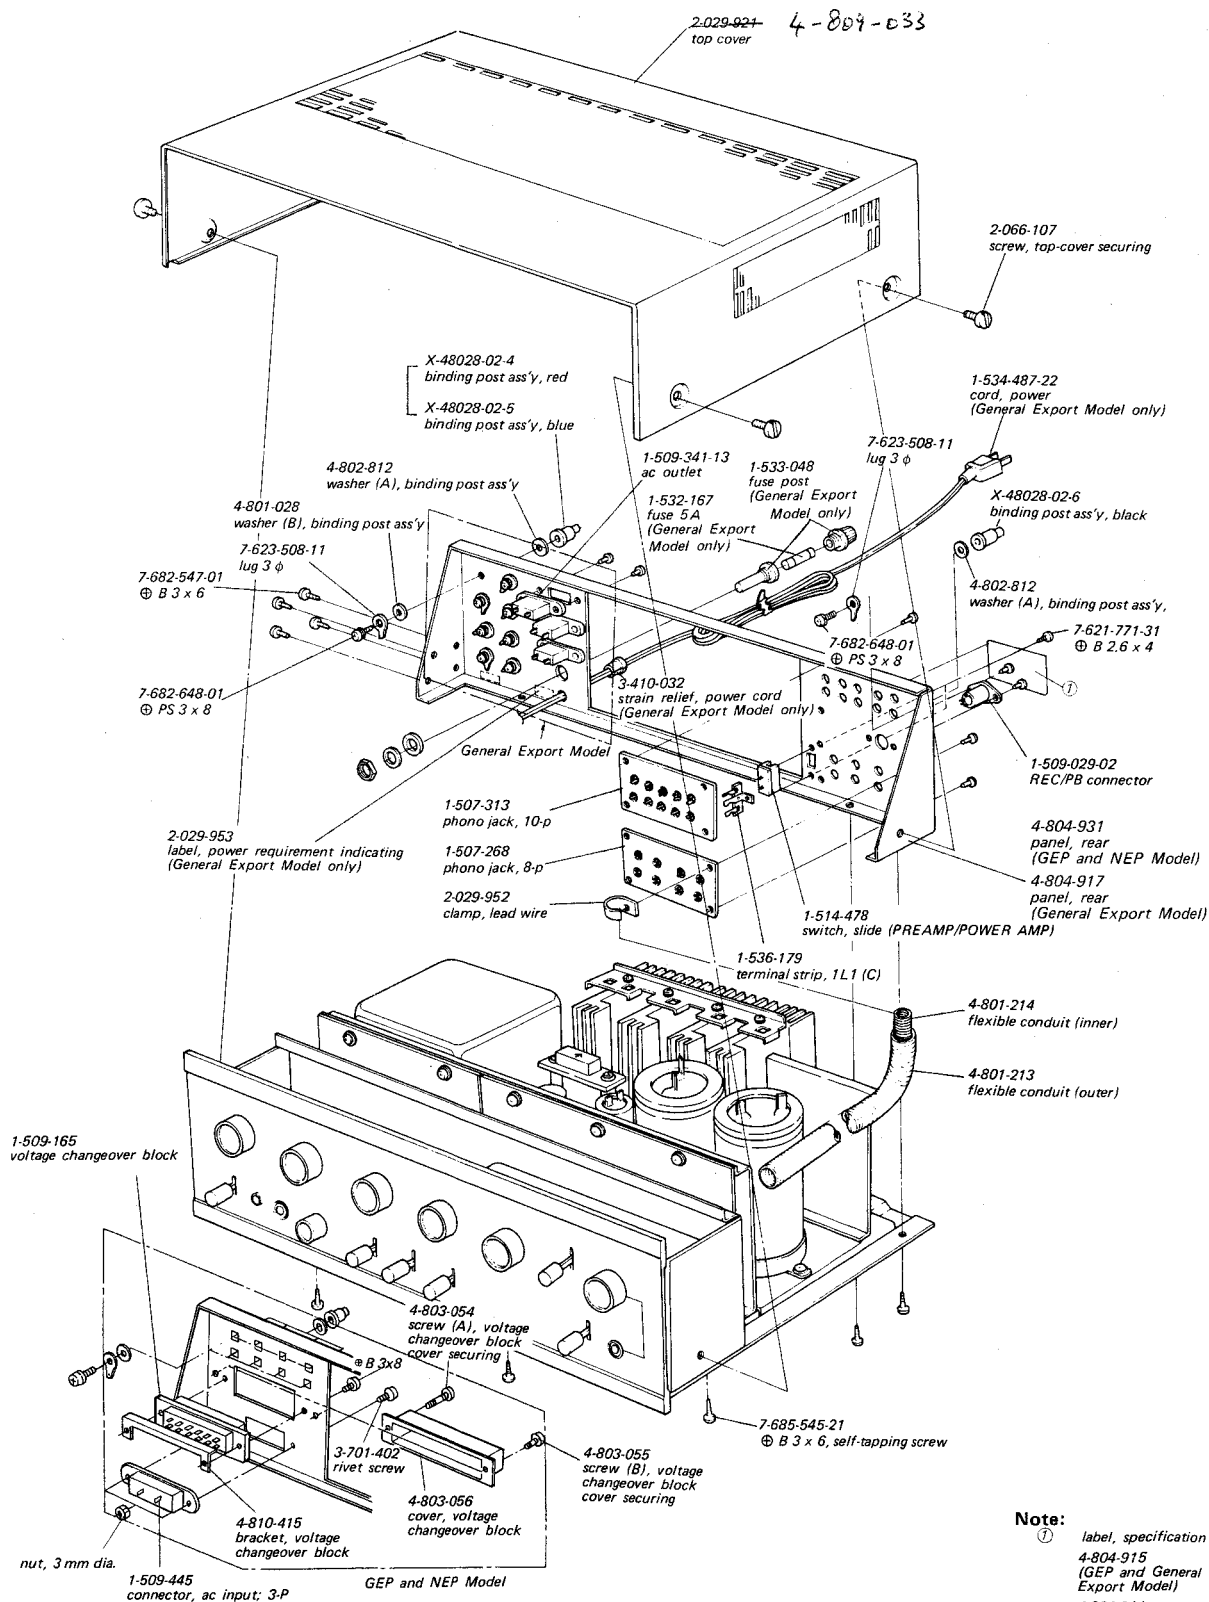

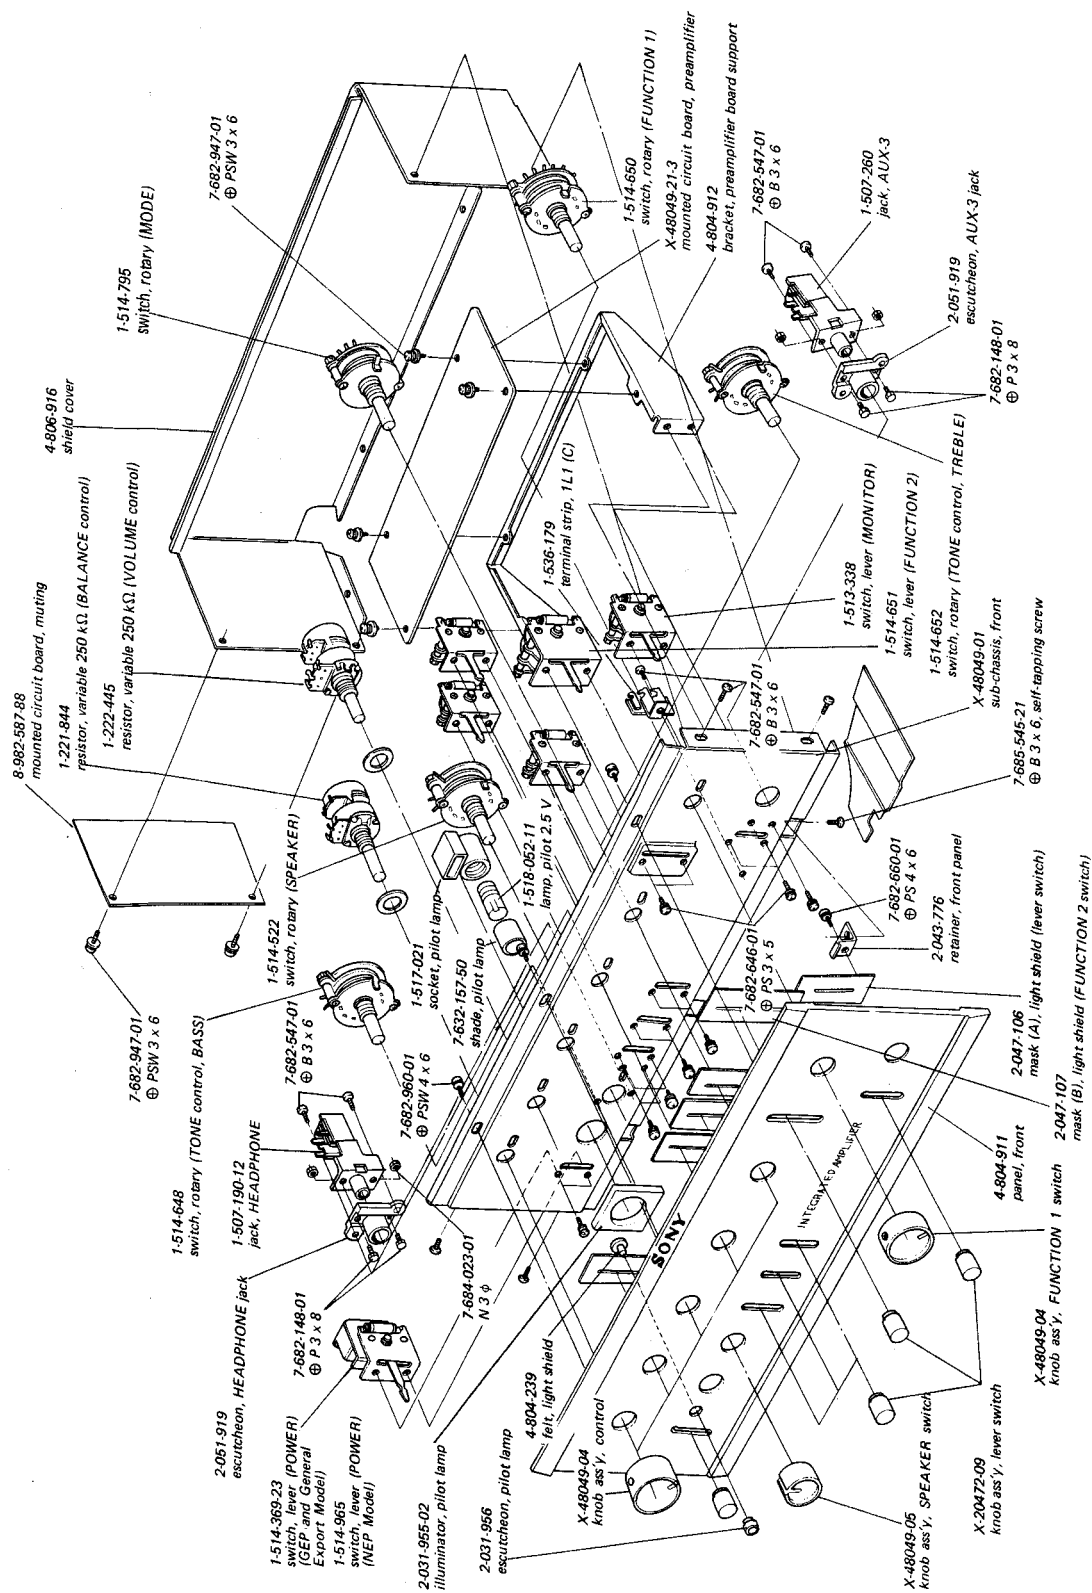

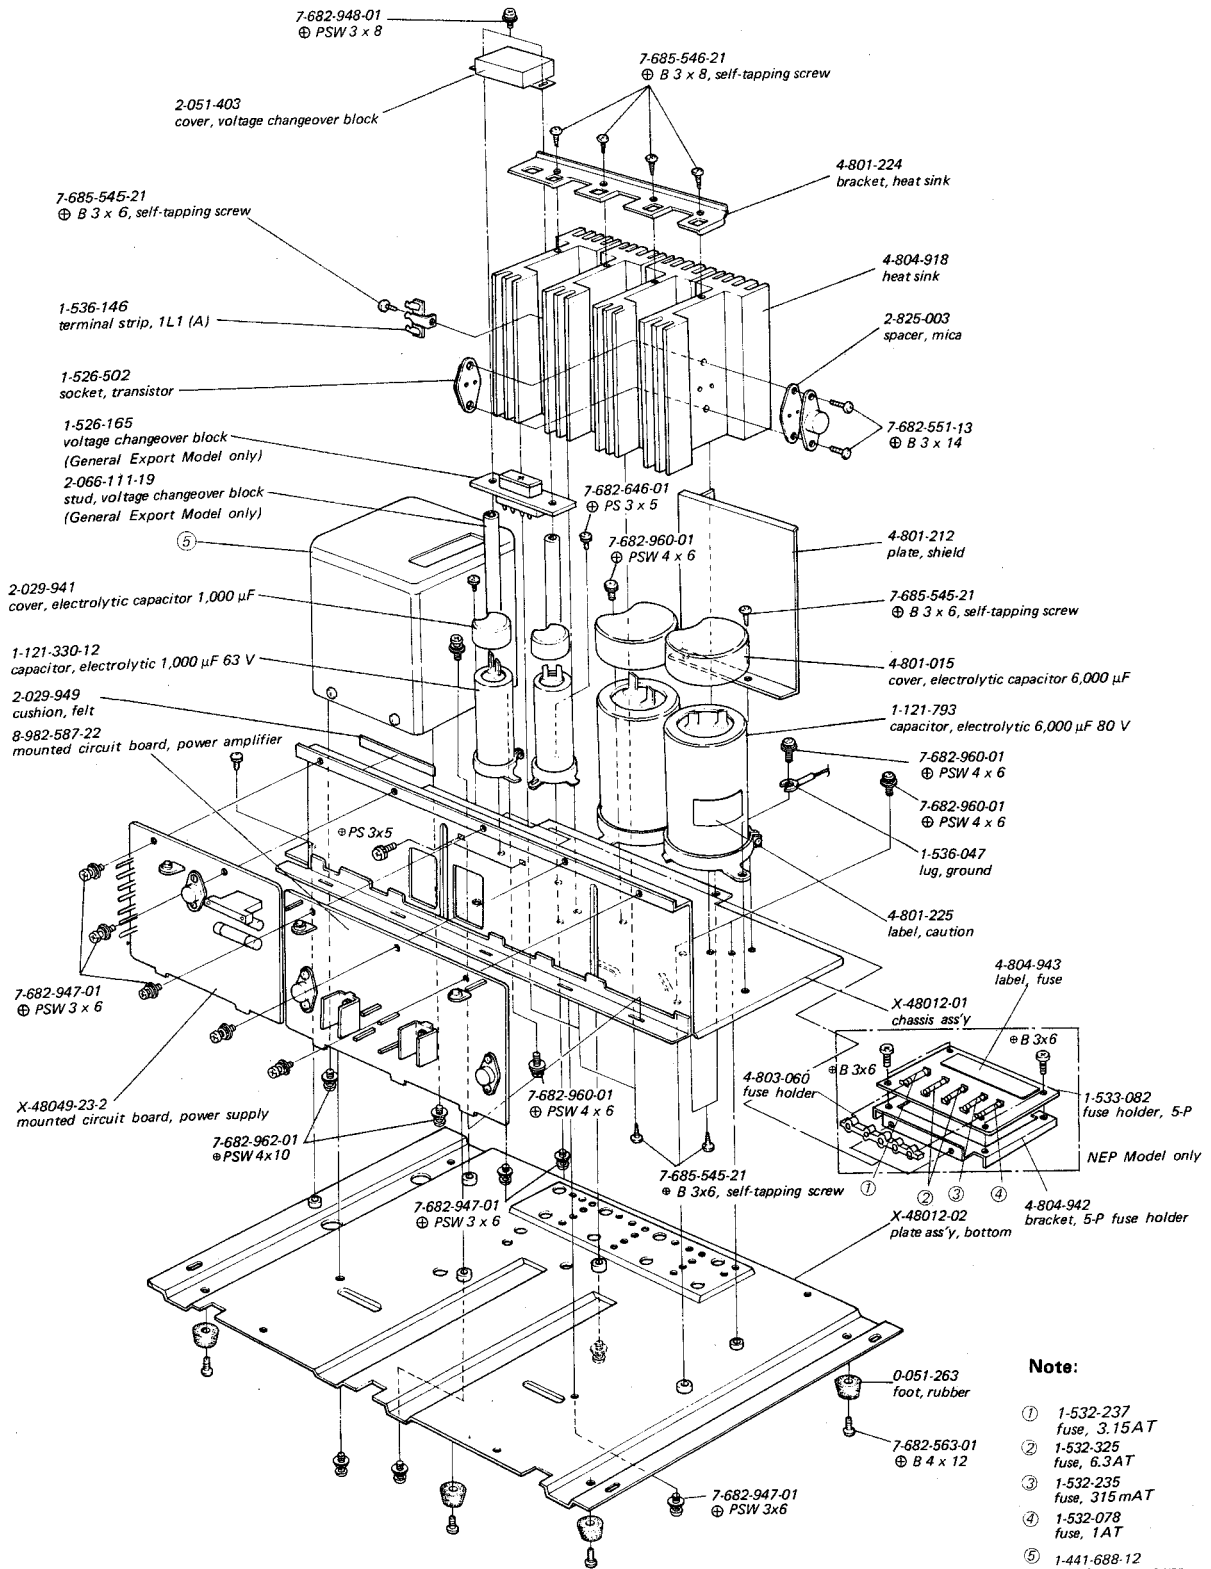

Note:

- ① 1-532-237
fuse, 3.15A T
- ② 1-532-325
fuse, 6.3A T
- ③ 1-532-235
fuse, 315 mA T
- ④ 1-532-078
fuse, 1A T
- ⑤ 1-441-688-12
transformer, power
(GEP and General Export Model)
- 1-441-830-11
transformer, power
(NEP Model)

SECTION 7

ELECTRICAL PARTS LIST

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
MOUNTED CIRCUIT BOARDS					
	X-48049-21-3	preamplifier circuit board	Q302 (Q402)	FET,	2SK23-37
	8-982-587-22	power amplifier circuit board	Q303 (Q403)	FET,	2SK23-35
	X-48049-23-2	power supply circuit board	Q701 (Q801)	transistor,	2SA705
	8-982-587-88	muting circuit board	Q702 (Q802)	transistor,	2SA705
SEMICONDUCTORS			Q704 (Q804)	transistor,	2SC1124A
D701 (D801)	diode,	10D-05	Q705 (Q805)	transistor,	2SC633A
D702 (D802)	varistor,	SV-31	Q707 (Q807)	transistor,	2SC633A
D704 (D804)	diode,	10D-05	Q708 (Q808)	transistor,	2SC633A
D705 (D805)	diode,	10D-05	Q709 (Q809)	transistor,	2SA678
D706 (D806)	diode,	10D-05	Q710 (Q810)	transistor,	2SC895
D707 (D807)	diode,	10D-05	Q711 (Q811)	transistor,	2SA527
D708 (D808)	diode,	10D-05	Q712 (Q812)	transistor,	2SD88A
D709 (D809)	diode,	10D-05	Q713 (Q813)	transistor,	2SD88A
D710 (D810)	diode,	10D-05	Q903	transistor,	2SC1124A
D711 (D811)	diode,	10D-2	Q904	transistor,	2SA706
D721	diode,	SH-1S	Q905	transistor,	2SC633A
D722	diode,	SH-1S	Q906	transistor,	2SC895
D901	diode,	10D-05	Q907	transistor,	2SC805
D902	diode,	10D-05	Q908	transistor,	2SC634A
D903	diode,	5B4	Q921	transistor,	2SC634A
D904	diode,	10D-2	Q922	transistor,	2SC634A
D905	diode,	10D-2	Q923	transistor,	2SC634A
D906	diode,	10D-05	TRANSFORMERS		
D907	diode,	10D-05	T osc	1-433-132-27	transformer, osc.
D908	diode,	10D-05	T	1-441-688-12	transformer, power
D909	diode,	10D-05			(GEP and General Export Model)
D910	diode,	1T23A		1-441-830-11	transformer, power (NEP Model)
D911	SCR,	1RC20	CAPACITORS		
D912	diode,	CD-2	All capacitance values are in μF except as indicated with p, which means $\mu\mu\text{F}$.		
D913	diode,	CDR-2	C101 (C201)	1-121-411	47 $\pm 100\%$ 50 V electrolytic
D914	diode,	10D-2	C102 (C202)	1-105-685-12	0.1 $\pm 10\%$ 50 V mylar
D915	diode,	10D-2	C103 (C203)	1-105-661-12	0.001 $\pm 10\%$ 50 V mylar
D917	diode,	1T243M	C104 (C204)	1-121-406	47 $\pm 100\%$ 3.15 V electrolytic
D918	diode,	10D-2	C105 (C205)	1-121-413	100 $\pm 100\%$ 6.3 V electrolytic
Q101 (Q201)	FET,	2SK23-22	C106 (C206)	1-121-413	100 $\pm 100\%$ 6.3 V electrolytic
Q102 (Q202)	transistor,	2SC632A	C107 (C207)	1-106-005-12	0.0015 $\pm 5\%$ 50 V mylar
Q301 (Q401)	FET,	2SK23-37	C108 (C208)		- discarded -
			C109 (C209)	1-106-019-12	0.0056 $\pm 5\%$ 50 V mylar

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C110 (C210)	1-105-689-12	0.22	±10%	50V mylar	C917	1-105-917-12	0.022	±20%	200V mylar
C301 (C401)	1-101-888	68 p	±5%	50V ceramic	C918	1-105-917-12	0.022	±20%	200V mylar
C302 (C402)	1-106-041-12	0.047	±5%	50V mylar	C919	1-121-559	50	±100%	100V electrolytic
C303 (C403)	1-105-689-12	0.22	±10%	50V mylar	C922	1-121-559	50	±100%	100V electrolytic
C304 (C404)	1-105-661-12	0.001	±10%	50V mylar	C923	1-121-793	6,000	±100%	80V electrolytic
C305 (C405)	1-121-420	220	±100%	10V electrolytic	C924	1-121-426	470	±100%	16V electrolytic
C306 (C406)	1-106-033-12	0.022	±5%	50V mylar	C925	1-105-917-12	0.022	±20%	200V mylar
C307 (C407)	1-105-675-12	0.015	±10%	50V mylar	C926	1-105-917-12	0.022	±20%	200V mylar
C308 (C408)	1-106-025-12	0.01	±5%	50V mylar	C931	1-121-426	470	±100%	16V electrolytic
C309 (C409)	1-121-413	100	±100%	6.3V electrolytic	C932	1-121-426	470	±100%	16V electrolytic
C310 (C410)	1-121-392	3.3	±150%	25V electrolytic	C933	1-105-675-12	0.015	±10%	50V mylar
C312 (C412)	1-121-392	3.3	±150%	25V electrolytic	C934	1-105-679-12	0.033	±10%	50V mylar
C313 (C413)	1-106-033-12	0.022	±5%	50V mylar	C935	1-121-425	470	±100%	10V electrolytic
C314 (C414)	1-105-673-12	0.01	±10%	50V mylar	C936	1-105-681-12	0.047	±10%	50V mylar
C315 (C415)	1-105-685-12	0.1	±10%	50V mylar	C941	1-121-411	47	±100%	50V electrolytic
C316 (C416)	1-106-033-12	0.022	±5%	50V mylar	C942	1-105-721-12	0.047	±10%	100V mylar
C317 (C417)	1-101-861	15 p	±5%	50V ceramic	C943	1-121-330	1,000	±100%	63V electrolytic
C318 (C418)	1-106-041-12	0.047	±5%	50V mylar	C944	1-121-330	1,000	±100%	63V electrolytic
C319 (C419)	1-106-033-12	0.022	±5%	50V mylar	C991	1-121-741	150	±20%	3.15V electrolytic
C320 (C420)	1-106-025-12	0.01	±5%	50V mylar	RESISTORS All resistance values are in ohms, ±5%, ¼ watts and carbon type unless otherwise indicated.				
C321 (C421)	1-106-025-12	0.01	±5%	50V mylar					
C322 (C422)	1-101-099	400 p	±20%	50V ceramic	R101 (R201)	1-244-713	47k		
C323 (C423)	1-101-099	400 p	±20%	50V ceramic	R102 (R202)	1-242-687	3.9k		
C701 (C801)	1-105-693-12	0.47	±10%	50V mylar	R103 (R203)	1-242-709	33k		
C702 (C802)	1-121-469	10	±100%	10V electrolytic	R104 (R204)	1-242-689	4.7k		
C704 (C804)	1-102-943	6 p	±0.5 pF	50V ceramic	R105 (R205)	1-242-669	680		
C705 (C805)	1-121-425	470	±100%	10V electrolytic	R106 (R206)	1-242-691	5.6k		
C706 (C806)	1-121-405	33	±100%	50V electrolytic	R107 (R207)	1-242-691	5.6k		
C707 (C807)	1-121-405	33	±100%	50V electrolytic	R108 (R208)	1-242-667	560		
C708 (C808)	1-105-681-12	0.047	±10%	50V mylar	R109 (R209)	1-210-051	2.2M		
C709 (C809)	1-105-681-12	0.047	±10%	50V mylar	R110 (R210)	1-242-672	910		
C710 (C810)	1-105-679-12	0.033	±10%	50V mylar	R111 (R211)	1-242-713	47k		
C711 (C811)	1-121-738	10	±100%	50V electrolytic	R112 (R212)	1-210-124	1.1M		
C712 (C812)	1-107-002	50 p	±10%	500V silvered mica	R113 (R213)	1-242-662	360		
C714 (C814)	1-107-091	180 p	±5%	50V silvered mica	R114 (R214)	1-242-727	180k		
C715 (C815)	1-121-413	100	±100%	6.3V electrolytic	R115 (R215)	1-242-695	8.2k		
C911	1-121-559	50	±100%	100V electrolytic	R116 (R216)	1-244-697	10k		
C913 (C921)	1-105-725-12	0.1	±10%	100V mylar	R117 (R217)	1-244-719	82k		
C914	1-121-559	50	±100%	100V electrolytic	R118 (R218)	1-244-733	330k		
C915	1-121-793	6,000	±100%	80V electrolytic	R301 (R401)	1-242-717	68k		
C916	1-121-426	470	±100%	16V electrolytic	R302 (R402)	1-242-701	15k		
					R303 (R403)	1-242-745	1M		

A-1130

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
R304 (R404)	1-242-683	2.7k			R704 (R804)	1-244-697	10k		
R305 (R405)	1-242-687	3.9k			R705 (R805)	1-244-677	1.5k		
R306 (R406)	1-242-721	100k			R706 (R806)	1-244-649	100		
R307 (R407)	1-242-703	18k			R707 (R807)	1-244-721	100k		
R308 (R408)	1-242-721	100k			R708 (R808)	1-244-715	56k		
R309 (R409)	1-242-673	1k			R709 (R809)	1-244-681	2.2k		
R310 (R410)	1-244-493	6.8k	1/8 W		R710 (R810)	1-244-679	1.8k		
R311 (R411)	1-244-473	1k	1/8 W		R711 (R811)	1-244-705	22k		
R312 (R412)	1-244-474	1.1k	1/8 W		R712 (R812)	1-244-679	1.8k		
R313 (R413)	1-244-469	680	1/8 W		R713 (R813)	1-202-587	3.9k	±10%	1/2 W composition
R314 (R414)	1-242-708	30k			R714 (R814)	1-202-587	3.9k	±10%	1/2 W composition
R315 (R415)	1-244-509	33k	1/8 W		R715 (R815)	1-221-967	10k (B), semi-fixed		
R316 (R416)	1-244-505	22k	1/8 W		R716 (R816)	1-244-681	2.2k		
R317 (R417)	1-244-502	16k	1/8 W		R717 (R817)	1-244-661	330		
R318 (R418)	1-244-501	15k	1/8 W		R718 (R818)	1-244-625	10		
R319 (R419)	1-244-496	9.1k	1/8 W		R719 (R819)	1-244-661	330		
R320 (R420)	1-242-745	1M			R720 (R820)	1-244-737	470k		
R321 (R421)	1-242-700	13k			R721 (R821)	1-244-737	470k		
R322 (R422)	1-242-679	1.8k			R722 (R822)	1-244-681	2.2k		
R323 (R423)	1-242-699	12k			R723 (R823)	1-244-681	2.2k		
R324 (R424)	1-242-683	2.7k			R724 (R824)	1-244-673	1k		
R325 (R425)	1-244-487	3.9k	1/8 W		R725 (R825)	1-244-673	1k		
R326 (R426)	1-244-493	6.8k	1/8 W		R726 (R826)	1-244-681	2.2k		
R327 (R427)	1-244-492	6.2k	1/8 W		R727 (R827)	1-244-681	2.2k		
R328 (R428)	1-244-495	8.2k	1/8 W		R728 (R828)	1-244-673	1k		
R329 (R429)	1-244-498	11k	1/8 W		R729 (R829)	1-244-673	1k		
R330 (R430)	1-242-733	330k			R730 (R830)	1-244-653	150		
R331 (R431)	1-242-701	15k			R731 (R831)	1-244-653	150		
R332 (R432)	1-244-491	5.6k	1/8 W		R732 (R832)	1-202-557	220	±10%	1/2 W composition
R333 (R433)	1-244-467	560	1/8 W		R733 (R833)	1-244-649	100		
R334 (R434)	1-244-471	820	1/8 W		R734 (R834)	1-244-625	10		
R335 (R436)	1-244-474	1.1k	1/8 W		R735 (R835)	1-244-659	270		
R336 (R436)	1-242-680	2k			R736 (R836)	1-205-803	0.5	±10%	5W wire-wound
R341 (R441)	1-244-709	33k			R737 (R837)	1-205-803	0.5	±10%	5W wire-wound
R342 (R442)	1-244-543	820k			R738 (R838)	1-202-525	10	±10%	1/2 W composition
R343 (R443)	1-242-744	910k			R739 (R839)	1-244-661	330		
R344 (R444)	1-244-543	820k							
R345 (R445)	1-242-744	910k			R906 (R909)	1-244-713	47k		
					R911	1-244-645	68		
R508 (R608)	1-202-565	10	±10%	1/2 W composition	R912	1-244-649	100		
R509 (R609)	1-207-167	500	±10%	1.5 W wire-wound	R913	1-244-705	22k		
					R914	1-244-645	68		
R701 (R801)	1-244-739	560k			R915	1-244-649	100		
R702 (R802)	1-221-967	10k (B), semi-fixed			R916	1-244-705	22k		
R703 (R803)	1-244-721	100k			R917	1-244-663	390		

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
R931	1-202-573	1k	S12	1-514-369-23	switch, lever/rotary (POWER) (GEP and General Export Model)
R932	1-202-573	1k		1-514-965	switch, lever/rotary (POWER) (NEP Model)
R933	1-244-666	510	MISCELLANEOUS		
R934	1-244-697	10k		1-507-190-12	jack, HEADPHONE
R941	1-244-707	27k		1-507-260	jack, AUX-3
R942	1-202-549	100 ±10% ½ W composition		1-507-268	phono jack, 8-P
R943	1-244-705	22k		1-507-313	phono jack, 10-P
R944	1-202-533	22 ±10% ½ W composition		1-509-029	REC/PB connector
R955	1-244-705	22k		1-509-341-13	ac outlet (General Export Model only)
R956	1-221-996	5k (B), semi-fixed		1-509-445	ac input connector, 3-P (GEP and NEP Model only)
R957	1-244-686	3.6 k		1-517-021	socket, pilot lamp
R991	1-242-663	390		1-518-052	lamp, pilot
R992	1-242-709	33 k		1-526-165	voltage changeover block
R993	1-242-687	3.9k		1-526-502	socket, transistor
R994	1-242-725	150k		1-532-325	fuse, 6.3 AT (F2, F3) (NEP Model only)
R995	1-202-597	10k ±10% ½ W composition		1-532-256	fuse, 6.3 A (F2, F3) (GEP and General Export Model only)
R996	1-242-697	10k		1-532-237	fuse, 3.15 AT (F1) (NEP Model only)
R997	1-242-711	39k		1-532-167	fuse, 5 A (F1) (General Export Model only)
R998	1-242-690	5.1 k		1-532-255	fuse, 5 A (F1) (GEP Model only)
R999	1-242-690	5.1 k		1-532-078	fuse, 1 AT (F4) (NEP Model only)
RV301 } (RV401) }	1-221-844	250 k, variable (BALANCE control)		1-532-235	fuse, 315 mA (F5) (NEP Model only)
RV302 } (RV402) }	1-222-445	250 k, variable (VOLUME control)		1-533-082	fuse holder, 5-P (NEP Model only)
SWITCHES				1-533-048	fuse post (General Export Model only)
S1	1-514-650	switch, rotary (FUNCTION 1)		1-536-047	pin, connecting
S2	1-514-651	switch, lever/rotary (FUNCTION 2)		1-536-146	terminal strip, 1L1 (A)
S3	1-513-338	switch, lever/rotary (MONITOR)		1-536-179	terminal strip, 1L1 (C)
S4	1-514-795	switch, rotary (MODE)		1-536-189	terminal strip, 1L1 (GEP Model only)
S5	1-513-338	switch, lever/rotary (LOUDNESS)		CP	1-231-057
S6	1-514-648	switch, rotary (TONE control, BASS)			encapsulated component, 120 Ω + 0.033 μF (General Export Model only)
S7	1-514-652	switch rotary (TONE control, TREBLE)		1-534-487-22	cord, power (General Export Model only)
S8	1-513-338	switch, lever/rotary (HIGH FILTER)		1-506-108	pin, connecting
S9	1-513-338	switch, lever/rotary (LOW FILTER)			
S10	1-514-478	switch, slide (PRE AMP/POWER AMP)			
S11	1-514-522	switch, rotary (SPEAKER)			